

Android4.0 Media Player User Manual



Table of Content

1. Simple Explanation of Housing

Front Panel	3
Back View	4
Remote Control	5

2. Section 2 Accessories

Accessories	6
-------------	---

3. Section3 Menu Guide

Media Center Menu	7
WIRELESS & Networks	-----
DEVICE	10
PERSONAL	-----
SYSTEM	-----
FILE BROWSER	-----
WEB BROWSER	-----

4. INSTALL/DELETER APP

 
5. SPECIFICATIONS

6. How to update the Firmware

 
7. Trouble shooting

Simple Explanation of housing

1.1 Front panel

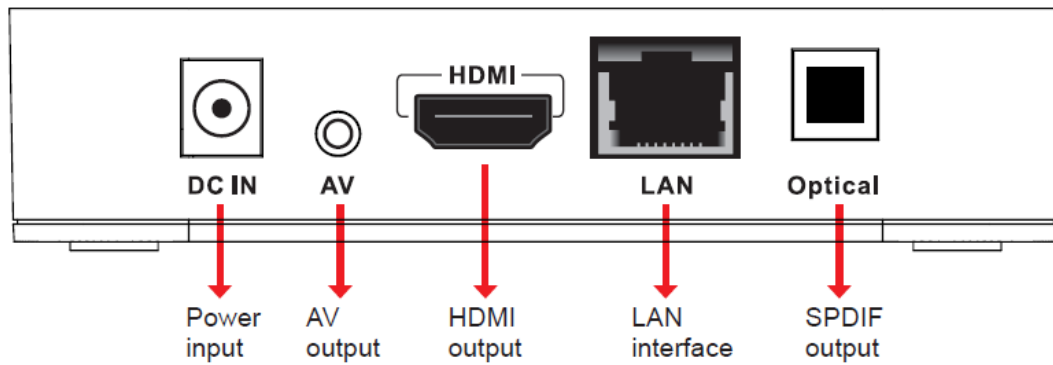



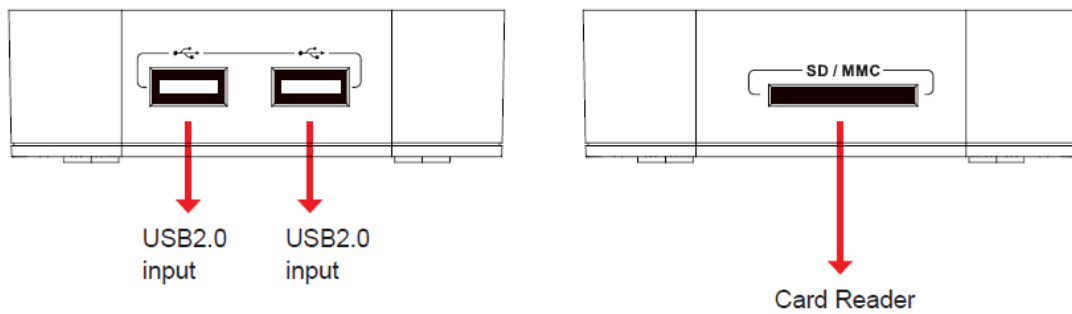

 




 
 

 




 



 




1.2 Back View



1.3 Remote Control



Key	Function	key	Function
	1. press the power button to standby or turn on. 2. keep press the power button over 3seconds it will turn off.		Fast key to go to syterm set up
	press to close the volume of the palyer		Fast key to go to Movie page
	To inpput the number		press to select an audio track on a media file
	press to choose function menu of corresponding application in Video, music, photo and website		switch to Mouse mode to up/down/left/right
	Press to return back to previous menu		Fast key to Browser page
	Press to navigate left/right/up/down. Press ok to confirm your choose.		Fast key to Application page
	Fast key to go back to main menu		Fast key to switch to HDMI/AV
	press to choose subtitles when playing movies		Fast key to Favorite page
	Fast forward		press to Zoom-
	press to play		Press to Zoom+
	press to increase the volume		press to decrease the volume
	Fast backward		Notice (connect device information)
	press to stop palying		press to repeat one file

Accessories:

Accessory:

- ◆ Media Player
- ◆ Remote Control
- ◆ Power adapter
- ◆ Manual
- ◆ AV Cable

 
Manual Guide

 
There are two ways (**Launcher /TVdLauncher**) to enter the main interface;



Launcher


When you select "Launcher" you will enter the interface.

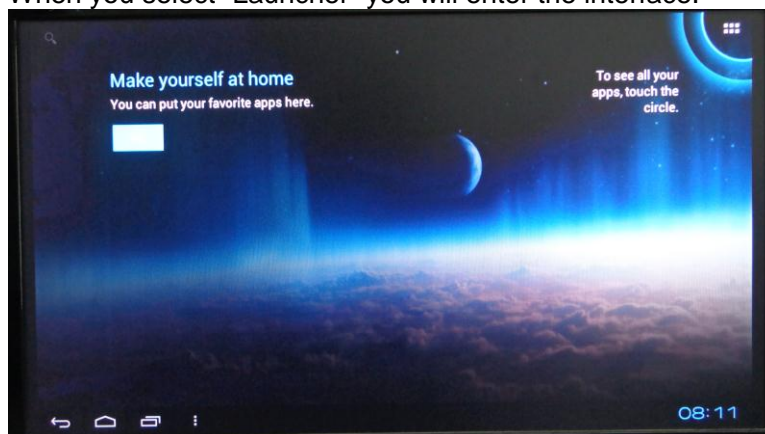

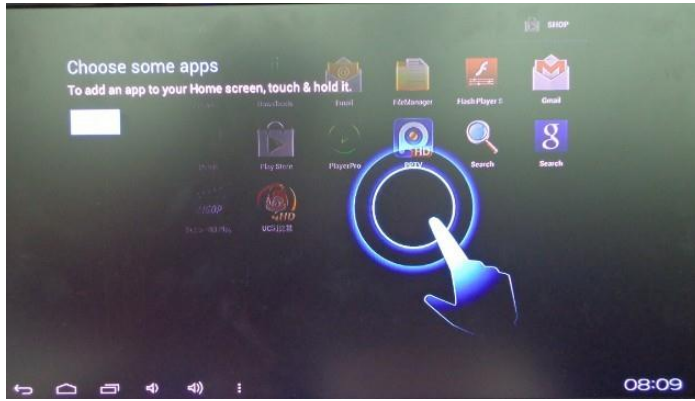


TVdlauncher

 Media Center Menu

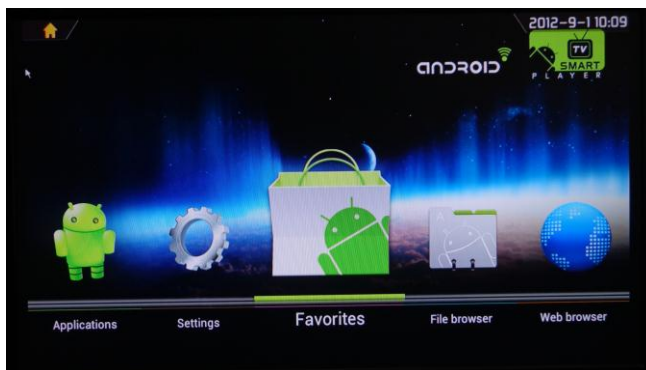

Applications

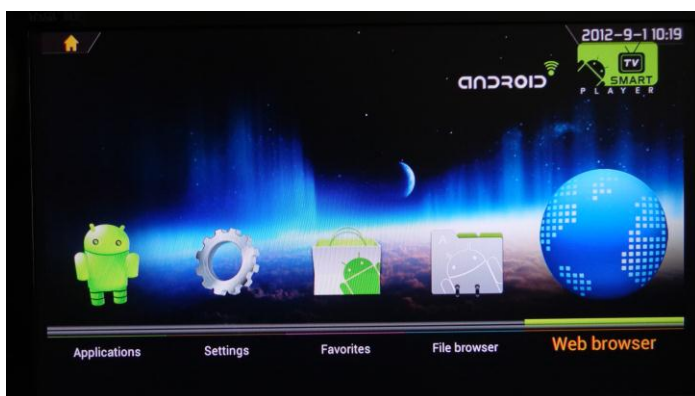 

Move to "Applications" icon, press Ok to enter in.

You can see icons refereeing to different functions on the picture

Settings

Move to “settings” icon, press “ok “to system setting, you will see the menu on the following picture.

WIRELESS & Networks

1. Wi-Fi setting and Network Setting

 


For external WIFI dongle it only supports the model as Realtek 8188.

2. Data Usage




3. More information about network setting (Ethernet/PPPOE settings/portable hotspot/WiFi Direct)

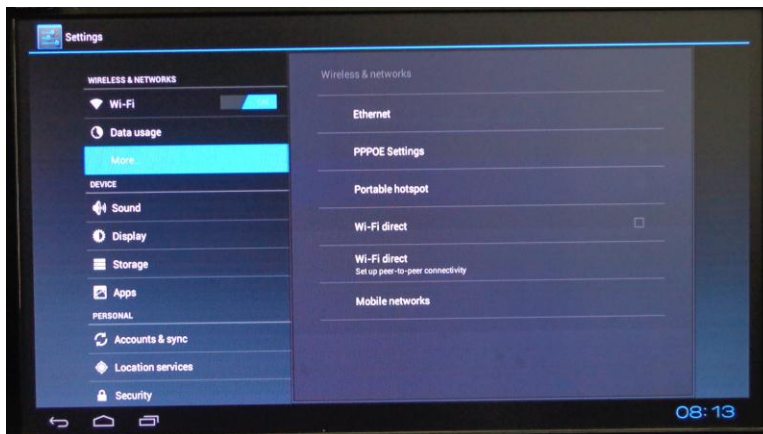

DEVICE

 
1. Sound

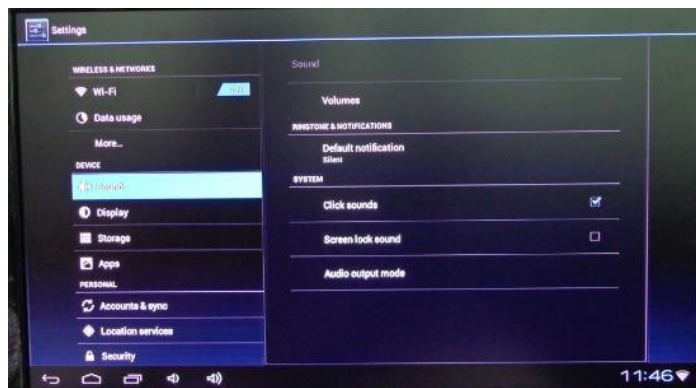

You can adjust the volume from this page.

2. Display

 Display settings

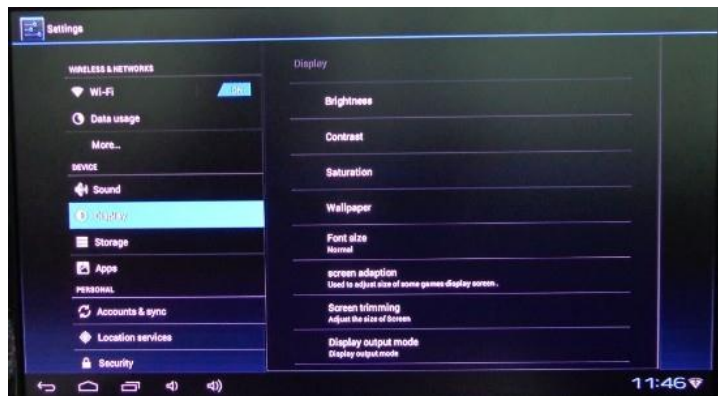


3. Storage

Storage information for media database.




4. APPS

 All information APK for this device.

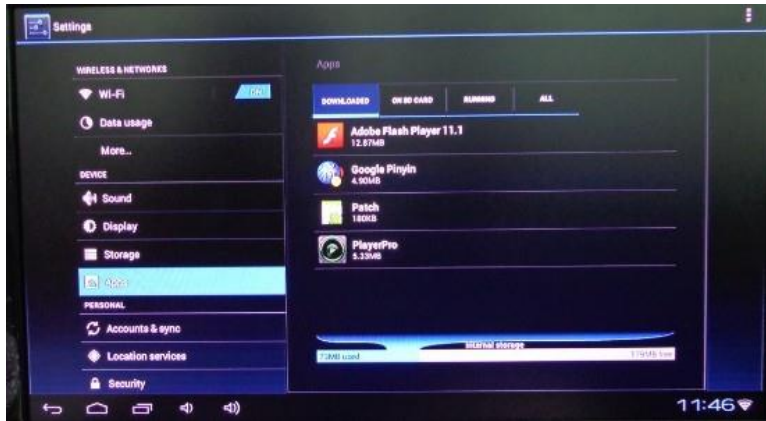


PERSONAL

 
1. Accounts & Sync

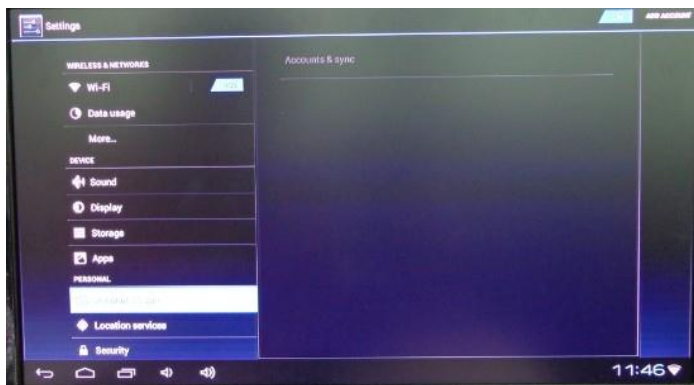

 2. Location Services

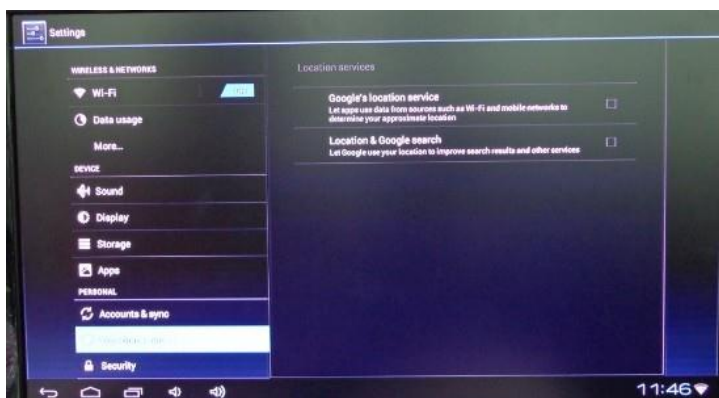


 3. Security

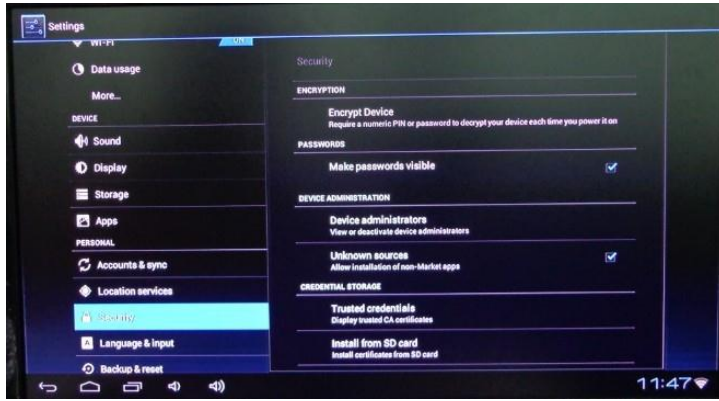


4. Language & input

 Multi-language you can choose.

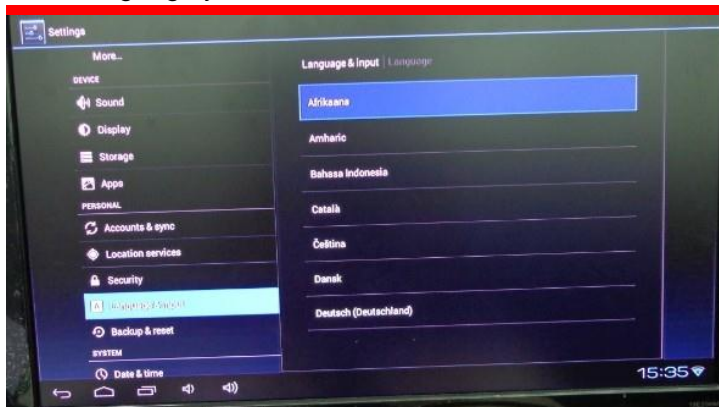


5. Backup & reset

 Backup & restore for Firmware

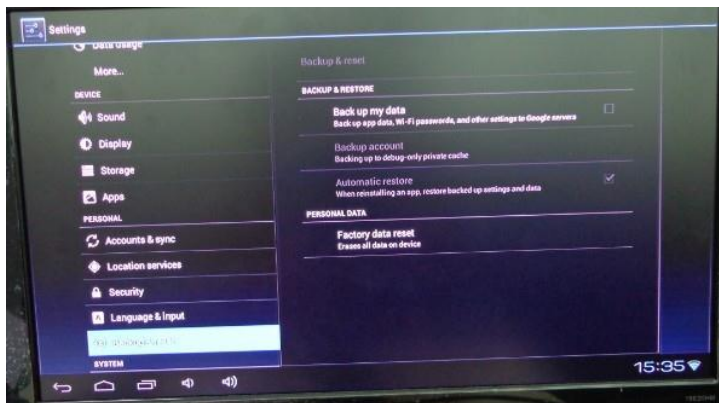


System

 
1. Date & time

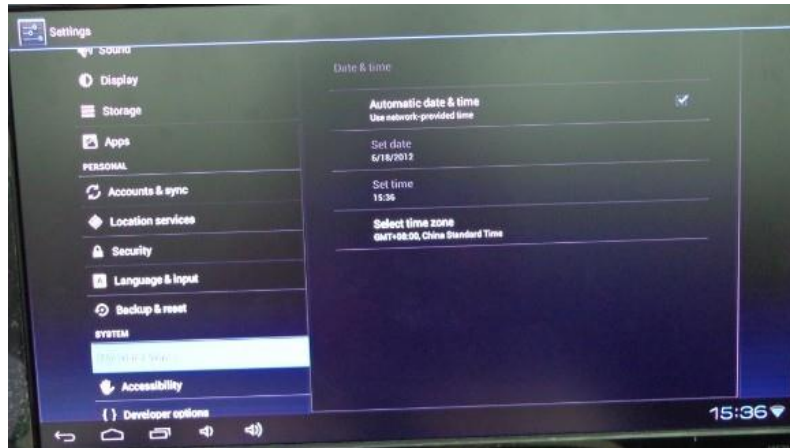

 2. Accessibility

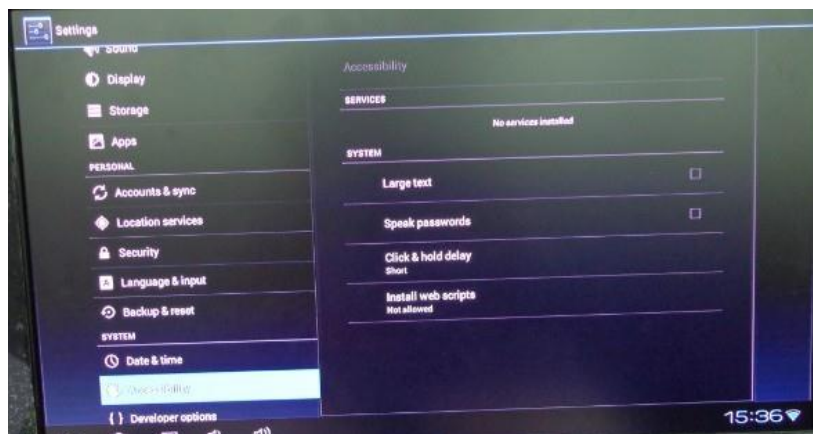


 4. Developer options

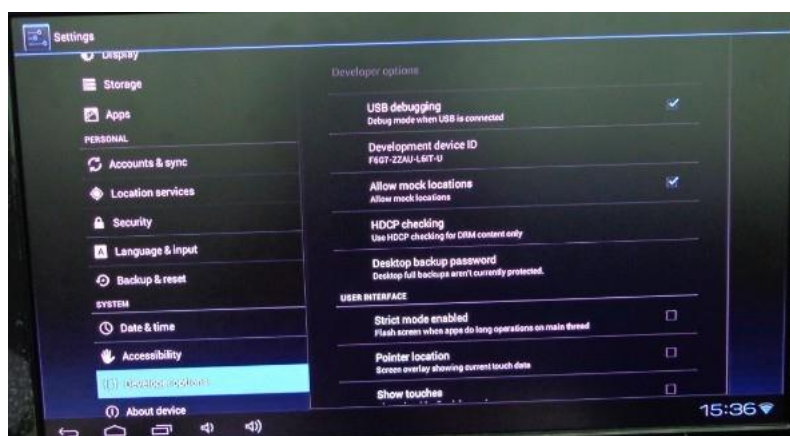

5. About Device

 All information for this Device.

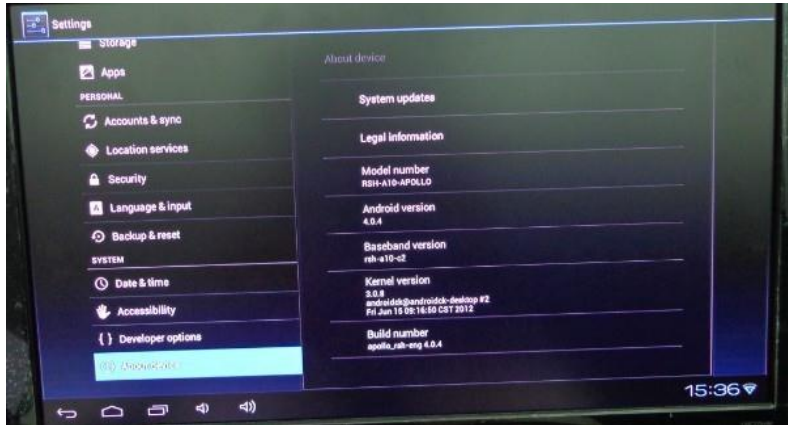


File browser

Browse and watch your video & Music& picture from USB Drive or SD/MMC card attached to the Box.



Web Browser

 It is a direct way to go to your desired website.

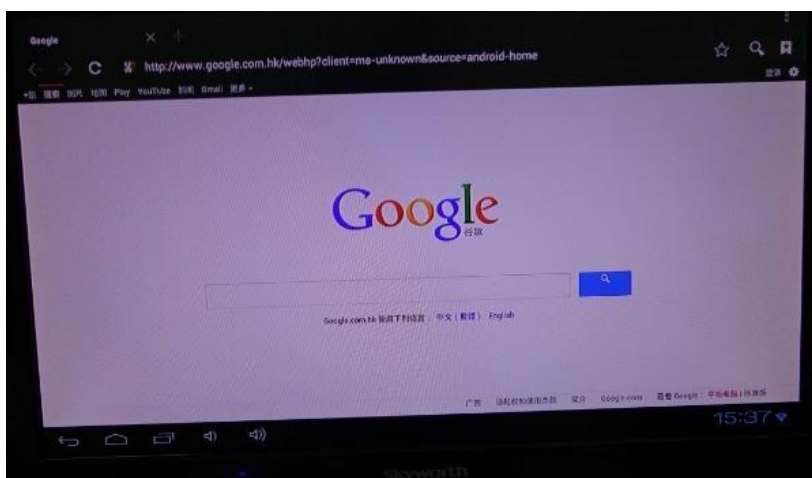


Install/delete APP

please download different application software from APK center. After program downloaded, just click it to install. You could also install Android program from other storage device. Please click downloads to find downloads software package. Then click to install.



Delete Program

 1. click "setting" and enter to "Apps", it will show up all the installed program list.
2. click "uninstall" icon need to delete.

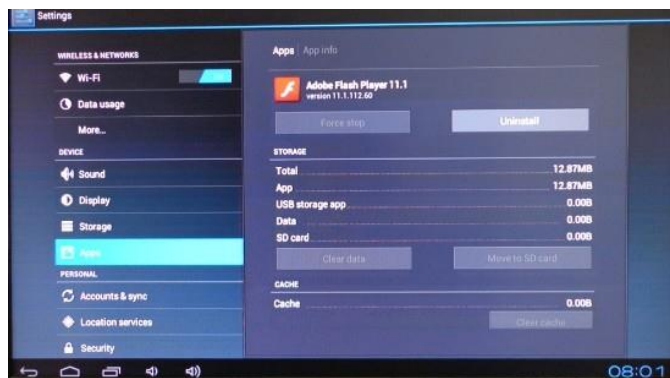


Specifications

Item NO.	Android 4.0 media player
CPU	AllwinnerA10 1GHZ Cotex-A8
GPU	2D/3D/OpenGL ES2.0(AMD Z430)/OpenVG1.1(AMDz160)@27M Tri/sec
Operating system	Android 4.0
DDR RAM	512MB (Option 1GB)
Nand Flash	2GB (Option 4GB/8GB/16GB)
Network Device	Wireless 802.11b/g,WAPI(Ralink 8188)/RJ45
Storage device	Support External storage via USB host/ SD/MMC card
Android APP	Youtube ,Twitter, Angrybird, Office, Gmail,Browser, Skype,Youku, Tudou, QQ...
Language	Multi-languages
USB interface	USB2.0 host*2 ,USB Storage card
Video	Video Decoding Mpeg1/2/4,H.264,VC-1,Divx,Xvid,RM8/9/10,VP6 Video Formats: MKV, TS, TP, M2TS, RM/RMVB, BD-ISO, AVI, MPG, VOB, DAT, ASF, TRP, FLV, etc full formats
Video Formats	WMV/ASF/MP4/3GP/3G2M4V/AVI/MJPEG/RV10/DivX/VC-1/MPEG-2/MPEG-4/H.263/H.264/1280*720P HDfps, 1080P/720*480 D1 30fps
Audio Formats	AAC, AAC+, eAAC+, AMR-NB, AMR-WB, QCP, MP3, WMA, WAVMIDI, M4A
Video Output	1920*1080P, 720P, 576P, 480P, Super HD 2160P, 3D Film
Interfaces	Video:HDMI/AV/SPDIF/RJ45 Storage:2USB-HOST, SD/MMC
Power supplier	5V/2A


How to update the Firmware

Updater:

 1. Copy the update tool file (phoenixCardv306-03-02) compress to your PC.

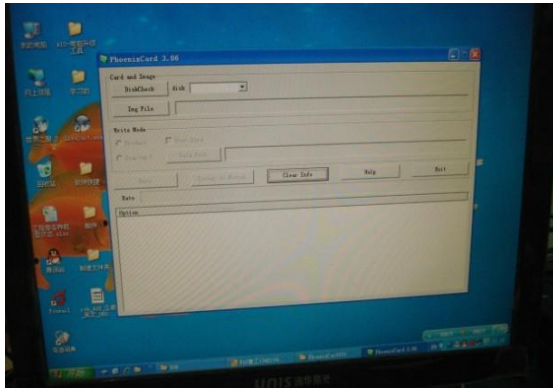

 2. Then Use the SD card connect to your PC.
3. Please select the file you want to upgrade in the interface, and then run.

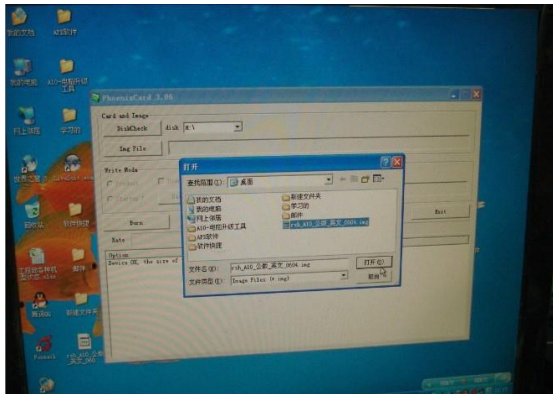

4. Runs successfully, the SD card to connect to the player, and then plug in the power. Then the LED will remain flashing, this process takes 3-5 minutes, the lights went out on to a successful upgrade. And then restart.

Troubleshooting

Warning

Under no circumstances should you try to repair the box by yourself, as this will invalidate the warranty. Do not open the box as there is a risk of electric shock. If a fault occurs, first check with points listed below before taking the box for repair. If you are unable to remedy a problem by following hints, consult your dealer for help.

problem	solution
no power	Check if the power adapter is properly connected . Check if the power adapter damaged or not.
No picture	Re-connect with HDMI cable or AV cable. Re-connect power adapter; Check if the output mode for TV and media box keep the same. Check if the TV is switched on.
No Sound or distorted sound	Adjust the volume Check if the cable connect to TV and media plafyer well. Check that the speakers are connected correctly
No audio or digital output	check if the cable connected well. Check if your amplifier is set correctly . Re-connect power adapter. Check if the output mode for TV and media box keep the same.
The remote control does not work	Aim the remote control directly at the sensor at the front of the box. Reduce the distance to the box. Replace the batteries in the remote control.
Player does not respond to some operating commands during display	Operations may not be permitted. Refer to the User manual. Possibility of system halted, re-insert with Power adaptor to restart.
No sound during movies display	The Audio codec may not be supported by the box. You can change to the supported audio on playing menu. Check the volume. Check if the cable connected well. Check if the output mode for TV and media box keep the same.
The contents of the USB flash drive&SD/MMC card cannot be read	The USB flash drive format is not compatible with the box. If one of the USB cannot read, please turn off the box and restart it.
No sound with HDMI connectin	Check if TV output mode is the same with media box. Check your TV system setup. Check the volume.
The TV screen is blank and the palyer LED is blinking	Turn off your palyer, wait 30 seconds, turn it on again, if under HDMI status, Check if HDMI connection is correct or change another HDMI cable. Set the output solution of this box into 720P.