

**November 2000**

**GPS RECEIVER**  
**GN-79N**

**SPECIFICATION/PROTOCOL MANUAL**

**By FURUNO ELECTRIC CO., LTD.**  
**System Products Division**

# **HY-LINE®**

## **COMMUNICATION PRODUCTS**

Inselkammerstraße 10  
82008 Unterhaching  
Tel.: 089 / 614 503 - 60  
communication@hy-line.de

Postfach 1222  
82002 Unterhaching  
Fax.: 089 / 614 09 60  
URL: www.hy-line.de

No part of this manual may be reproduced or transmitted in any form or by any means, electronic or mechanical, including photocopying and recording, for any purpose without the express written permission of the publisher, FURUNO ELECTRIC CO., LTD.

© 2000 FURUNO ELECTRIC CO., LTD. All rights reserved.

The Global Positioning System (GPS) is operated by the U. S. DoD and is subject to U. S. Government Selective Availability (SA) policy, thus FURUNO is not liable for the degradation by SA. Users are expected to be familiar with the System and make full use of it with their own responsibility.

FURUNO ELECTRIC CO., LTD. reserves the right to make changes to its products and specifications without notice.

# TABLE OF CONTENTS

## PAGE

### 1. OUTLINE

1.1 MODEL NAME .....	1
----------------------	---

### 2. SPECIFICATION

2.1 GENERAL SPECIFICATION .....	1
---------------------------------	---

#### 2.2 ELECTRICAL SPECIFICATION

##### 2.2.1 ANTENNA CONNECTOR

2.2.1.1 PIN ASSIGNMENT .....	1
------------------------------	---

2.2.1.2 ABSOLUTE MAXIMUM RATINGS .....	1
--	---

2.2.1.3 RATINGS .....	2
-----------------------	---

2.2.1.4 ANTENNA PREAMP. POWER SUPPLY .....	2
--	---

2.2.1.5 ANTENNA SPECIFICATION .....	2
-------------------------------------	---

##### 2.2.2 POWER/COMMUNICATION CONNECTOR

2.2.2.1 PIN ASSIGNMENT .....	3
------------------------------	---

2.2.2.2 ABSOLUTE MAXIMUM RATING .....	3
---------------------------------------	---

2.2.2.3 RATING .....	4
----------------------	---

##### 2.2.2.4 COMMUNICATION SPECIFICATION

2.2.2.4.1 TD, RD SIGNAL LOGIC .....	5
-------------------------------------	---

2.2.2.4.2 1PPS TIMING .....	5
-----------------------------	---

2.3 ENVIRONMENTAL CONDITIONS .....	5
------------------------------------	---

### 3. SOFTWARE SPECIFICATION

3.1 PROGRAM NUMBER .....	6
--------------------------	---

3.2 COMMUNICATION SPECIFICATION .....	6
---------------------------------------	---

#### 3.3 ABOUT NMEA-0183 PROTOCOL

3.3.1 APPROVED SENTENCES .....	7
--------------------------------	---

3.3.2 PROPRIETARY SENTENCES .....	8
-----------------------------------	---

3.4 LIST OF NMEA-0183 SENTENCES .....	9
---------------------------------------	---

3.5 LIST OF PARAMETERS & BACKED-UP DATA .....	10
---	----

#### 3.6 NMEA-0183 INPUT SENTENCES

\$XXGLL: Set initial position .....	11
-------------------------------------	----

\$XXGGA: Set initial position .....	12
-------------------------------------	----

\$XXZDA: Set date/time .....	13
------------------------------	----

\$XXRMC: Set initial position/UTC .....	14
---	----

\$PFEC,GPclr: Restart .....	15
-----------------------------	----

\$PFEC,GPset: Setup receiver parameters .....	16
---	----

\$PFEC,GPsrq: Get receiver parameters .....	18
---	----

\$PFEC,GPint: Request output / Set log output intervals .....	19
---	----

\$PFEC,GPirq: Get log sentence output intervals .....	20
---	----

\$PFEC,GPdif: Set DGPS parameter .....	21
--	----

\$PFEC,GPdrq: Get DGPS parameter .....	22
--	----

**3.7 NMEA-0183 OUTPUT SENTENCES**

**\$GPDTM: Datum/Set DGPS parameter ..... 23**  
**\$GPGGA: Position, altitude, UTC, etc. .... 24**  
**\$GPZDA: Date/Time ..... 26**  
**\$GPGLL: Position, UTC, etc. .... 27**  
**\$GPGSA: Positioning status ..... 28**  
**\$GPGSV: Satellite details ..... 29**  
**\$GPVTG: Course and speed ..... 30**  
**\$GPRMC: UTC, position, course, speed, etc. .... 31**  
**\$PFEC,GPanc: Almanac date and satellite's health condition .... 33**  
**\$PFEC,GPacc: SV(satellite) Accuracy ..... 34**  
**\$PFEC,GPast: Position, altitude, speed, course, local time etc. .. 35**  
**\$PFEC,GPtst: Self-test results ..... 37**  
**\$PFEC,GPssd: Receiver parameters set by \$PFEC,GPset ..... 38**  
**\$PFEC,GPisd: Log output intervals set by \$PFEC,GPint ..... 39**  
**\$PFEC,GPdsd: DGPS parameters set by \$PFEC,Gpdif ..... 40**  
**\$PFEC,GPdie: Receiver status ..... 41**  
**\$PFEC,Gpspe,ANCOUT: Down-load almanac ..... 42**  
**\$PFEC,Gpspe,ANCINP: Up-load almanac ..... 43**

**5. GEODETIC ID ..... 44**

# 1. OUTLINE

## 1.1 MODEL NAME

GN-79N

# 2. SPECIFICATION

## 2.1 GENERAL SPECIFICATION

ITEM	SPECIFICATION
Receiving Frequency	1575.42 MHz
Tracking Code	C/A code
Numbers of Channel/Method	12 Ch/Parallel
Max. Number of Satellites Tracked	12 satellites
Dynamics Acceleration	>49m/s <sup>2</sup> (sustained tracking)
Positioning	All-in-view SPS positioning (DGPS RTCM-SC104)
Communication Channel	Channel each for input & output Asynchronous, serial
UTC-Synchronized Pulse Output	1 pulse per second

## 2.2 ELECTRICAL SPECIFICATION

### 2.2.1 ANTENNA CONNECTOR

#### 2.2.1.1 PIN ASSIGNMENT

Receptacle : H-FL-R-SMT (by Hirose)

Matching connector : H-FL-LP (by Hirose)

PIN LOCATION	SIGNAL	FUNCTION
Center Contact	SIG	Input of Receiving Signal
Outer Contact	GND	Antenna Ground

#### 2.2.1.2 ABSOLUTE MAXIM RATINGS

ITEM	MAXIMUM	UNIT
Antenna Preamp. Output Power	-8	dBm

(at -30 to +80 )


### 2.2.1.3 RATINGS

	ITEM	MINIMUM	TYPICAL	MAXIMUM	UNIT	REMARKS
SIG INPUT	Impedance		50		ohms	
	Frequency(fo)		1.57542		GHz	
	Receiving Sensitivity	-133			dBm	Input level to proper Antenna at fixed position
ANTENNA	Voltage	4.5			V	@VANT(*)=5.0V I=20mA
PRE. AMP	Voltage	4.0			V	@VANT(*)=5.0V I=40mA
POWER	Open detection current	0		10	mA	@VANT(*)=4.5 to 5.5V
	Short detection current	52		87	mA	@VANT(*)=4.5 to 5.5V

VANT(\*): Antenna preamp. power input. (at -30 to +80 )

### 2.2.1.4 ANTENNA PREAMP. POWER SUPPLY

External power applied to Pin #6(VANT) of the Communication/Power Supply Connector is fed to the antenna/preamplifier through the internal protection resistor (19.5ohms  $\pm$ 5%) and SIG pin of the antenna connector. Note that the signal is superimposed (biased) on this DC voltage.

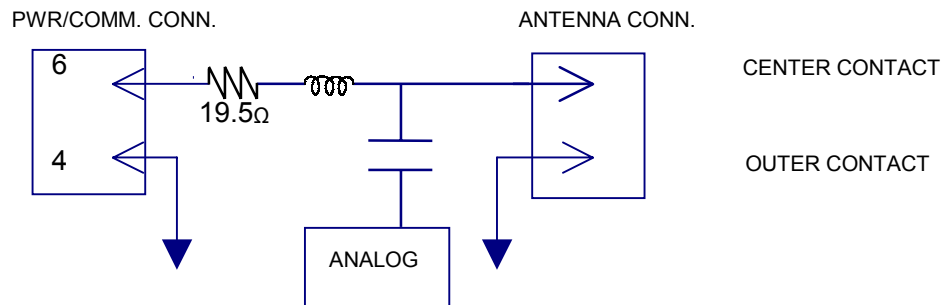

### 2.2.1.5 ANTENNA SPECIFICATION

ITEM	REQUIREMENTS
Impedance	50 ohms
NF	<3 dB
Gain	10 to 35 dB (including cable loss)

## 2.2.2 POWER/COMMUNICATION CONNECTOR

### 2.2.2.1 PIN ASSIGNMENT

\* Receptacle type 53254-0710 (By Molex Japan Co., LTD.)

\* Matching connector type 51065-0700 (By Molex Japan Co., LTD.)

PIN NO.	SIGNAL	FUNCTION
1	1PPS	1 pulse/sec output
2	TD	Data output
3	RD	Data input
4	GND	Ground
5	VBAK	Back-up power supply (*)
6	VANT	Antenna pre. amp. power supply
7	VCC	Power Supply

(\*) No internal backup power supply is available.

### 2.2.2.2 ABSOLUTE MAXIMAM RATING

ITEM	MAXIMUM RATING	UNIT	Condition
RD input voltage	-0.3 to +6.6 & -0.3 to VCC+3.0	V	
TD/1PPS output voltage	-0.3 to +6.6 & -0.3 to VCC+3.0	V	
TD output current (*)	±20	mA	
VCC input voltage	-0.3 to +6.5	V	
VBAK input voltage	-0.3 to +6.5	V	
VANT input voltage	-0.3 to +6.5 & -0.3 to +VCCx2	V	Antenna current<220mA

(at -30°C to +80°C)

(\*) The current into the GN-79N should be (+).

### 2.2.2.3 RATING

(at -30°C to +80°C)


ITEM			MIN.	TYPICAL	MAX.	UNIT	REMARKS
TD/1PPS <sup>2</sup> (OUTPUT)	H	VOLTAGE	VCC-1.0		VCC	V	@-150 μA <sup>1</sup>
	L	VOLTAGE	0		0.4	V	@4.0mA
RD <sup>3</sup> (INPUT)	H	VOLTAGE	2.6		VCC	V	
		CURRENT <sup>1</sup>			±0.1	mA	@VCC
	L	VOLTAGE	0		0.8	V	
		CURRENT <sup>1</sup>			-1.2	mA	@0.8V
1PPS (OUTPUT)	H	VOLTAGE	3.8			V	@-4.0mA <sup>1</sup>
	L	VOLTAGE			0.5	V	@4.0mA
	Duty			50		%	
VCC	VOLTAGE		4.5	5.0	5.5	V	
	CURRENT <sup>1</sup>			79		mA	@3.3V, 25°C
VBAK	VOLTAGE		2.5		5.5	V	
	CURRENT <sup>1</sup>			3.0	10	μA	@VBAK=3.0V VCC=0V 25°C,
VANT	VOLTAGE		4.5	5	5.5	V	

<sup>1</sup>The current into the GN-79N should be (+).

VCC


<sup>2</sup>Pulled up to VCC through 4.7KΩ (±5%) Register.

TD output Equivalent Circuit

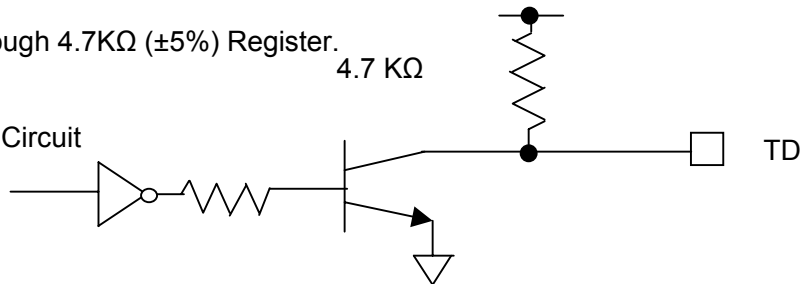

<sup>3</sup>Pulled up to VCC through 4.7KΩ (±5%) Register.


RD Input Equivalent Circuit

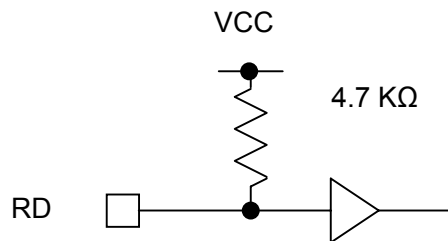




## 2.2.2.4 COMMUNICATION SPECIFICATION

### 2.2.2.4.1 TD, RD SIGNAL LOGIC

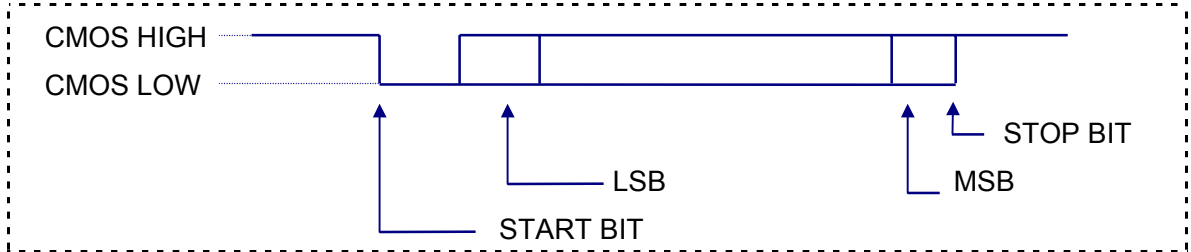

### 2.2.2.4.2 1 PPS TIMING

- 1 PPS is output synchronized with UTC during when positioning is obtained.
- Rising edge of 1 pps is synchronized with UTC one second.

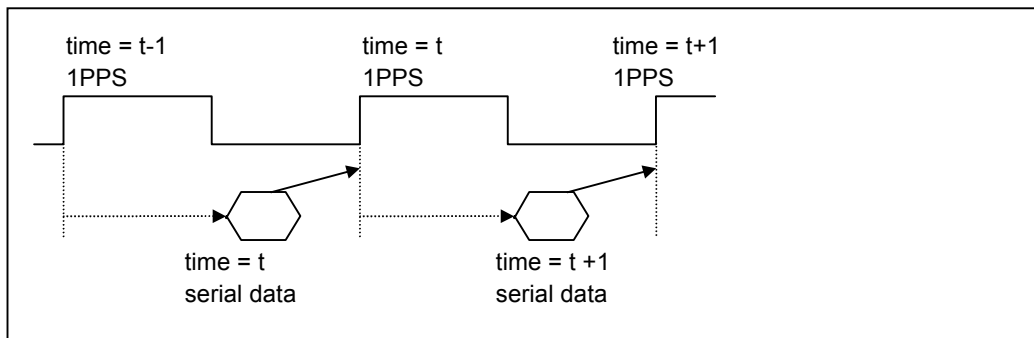

## 2.3 ENVIRONMENTAL CONDITIONS

ITEM		UNIT	REMARKS
OPERATING TEMPERATURE	-30 to +80	°C	
BACK-UP TEMPERATURE	-30 to +80	°C	
STORAGE TEMPERATURE	-40 to +85	°C	
HUMIDITY	90	%RH	@ +60°C No condensation
	95		@ +45°C No condensation
VIBRATION	43.1	m/s <sup>2</sup>	@ 10 to 200 Hz

### 3. SOFTWARE SPECIFICATION

#### 3.1 PROGRAM NUMBER

Program number 48502180 \* \* ( \* \* represents version number )

#### 3.2 COMMUNICATION SPECIFICATION

System: Full Duplex Asynchronous  
Speed: 4800 BPS  
Start Bit: 1 bit  
Data Length: 8 bits (MSB=0)  
Stop Bit: 1 bit  
Parity Bit: None

Start Bit	B0	B1	B2	B3	B4	B5	B6	B7	Stop Bit
-----------	----	----	----	----	----	----	----	----	----------

Flow Control: None  
Signal Lines used: TD1 and RD1 only (TD2 and RD2 not used)  
Data Output Interval: 0 to 2 seconds

##### Character Codes used

NMEA-0183 Sentences: ASCII (HEX 0D,0A,20 to 7E)

Differential GPS Data: Binary ("6-of-8" format)  
(B7=0, B6=1, Only B5 to B0 are used.)

Electrical specification: Similar to RS-232C

##### Protocol:

NMEA-0183 Sentences: NMEA-0183 Ver 2.30 dated March 1, 1998  
(Approved/proprietary sentences)  
(Input/Output)

Differential GPS Data: RTCM SC-104 Ver 2.1 dated January 3, 1994  
(Input only)

NOTE: NMEA-0183 sentence and differential GPS data inputs may coexist because the GN79 can distinguish them automatically.

### 3.3 ABOUT NMEA-0183 PROTOCOL

#### 3.3.1 APPROVED SENTENCES

Approved sentences are those of which formats are defined and fixed within the NMEA 0183 Standard. Any portion within an approved sentence format is NOT user-definable. An approved sentence generally takes the following form:

\$<address field>,<data field>.....[\*<checksum field>]<CR><LF>

Where:

Field	Description
\$	Start-of-Sentence marker
<address field>	5-byte fixed length. First 2 bytes represent a talker ID, and the rest 3 bytes do a sentence formatter.  All sentences transmitted by GN-79N bear talker ID "GP" meaning a GPS receiver.  For the sentences received from external equipment, the GN-79N accepts any talker ID. Talker ID "XX" found on the succeeding pages is a wildcard meaning "any valid talker ID".
,<data field>....	Variable or fixed-length fields preceded by delimiter ","(comma).  Comma(s) are required even when valid field data are not available i.e. null fields. Ex. ",,,,,"  In a numeric field with fixed field length, fill unused leading digits with zeroes.
*<checksum field>	8 bits data between "\$" and "*" (excluding "\$" and "*" ) are XORed, and the resultant value is converted to 2 bytes of hexadecimal letters. Note that two hexadecimal letters must be preceded by "*", and delimiter "," is not required before *<checksum>.  All output sentences have checksum.  For input sentences, the resultant value is checked and if it is not correct, the sentence is treated invalid.  No checksum is added to almanac data, which is either up-loaded to or down-loaded from the receiver. The responding sentences to almanac up-loading or down-loading have no check-sum, either.
<CR><LF>	End-of-Sentence marker

Maximum length from "\$" to <CR><LF> is limited to 82 bytes including "\$" and <CR><LF>. Every input sentence in and over 83 bytes is ignored. Be careful with entering GPset and Gpint sentences. Suggest to verify if the input is done correctly by issuing GPsrq, GPirq, GPdrq sentences. Please see 3.4 LIST OF NMEA-0183 SENTENCES (page 11).

Examples of Approved Sentences:

\$GPGLL,3444.000,N,13521.00,E <CR><LF>

\$XXGLL,3444.000,N,13521.00,E<CR><LF>

"XX" may be any valid talker ID, such as "LC"(Loran C).

### 3.3.2 PROPRIETARY SENTENCES

The NMEA-0183 standard allows nav-aid makers to send proprietary sentences if the minimum rules defined by the NMEA are obeyed. Proprietary sentences must take the following form, but it is free to makers what kind of fields are included and in what order they are transmitted out.

\$P<maker ID>,<data field>...< \* check sum field><CR><LF>

Where:

Field	Description
\$	Start-of-Sentence marker
P	Proprietary sentence identifier
<maker ID>	3-byte fixed length. GN-79N's maker ID is "FEC" meaning Furuno Electric Company.
,<data field>....	Variable or fixed-length fields preceded by delimiter ","(comma). (Layout is maker-definable.)
<check sum field>	8 bits data between "\$" and "*" (excluding "\$" and "*") are XORed, and the resultant value is converted to 2 bytes of hexadecimal letters. Note that two hexadecimal letters must be preceded by "*", and delimiter "," is not required before *<checksum>.  All output sentences have checksum.  For input sentences, the resultant value is checked and if it is not correct, the sentence is treated invalid.  No checksum is added to almanac data, which is either up-loaded to or down-loaded from the receiver. The responding sentences to almanac up-loading or down-loading have no check-sum, either.
<CR><LF>	End-of-Sentence marker

### 3.4 LIST OF NMEA-0183 SENTENCES

The following NMEA-0183 sentences are supported by GN-79N.

		INPUT SENTENCE		OUTPUT SENTENCE		
HIGH ↑ PRIORITY ↓ LOW				GPDTM	Datum	
	XXGGA	Set initial position	GPGGA	Position, time etc.	OO	
	XXZDA	Set time, etc.	GPZDA	Time etc.	OO	
	XXGLL	Set initial position	GPGLL	Position, time, etc.	O	
			GPGSA	Status, DOP	O	
			GPGSV	Satellite details	OO	
			GPVTG	Speed, Course.	OO	
	XXRMC	Set initial position, time	GPRMC	Position, time, speed, course	O	
			GPalt	No. of satellites expected in coming 24 hours	O	
			GPanc	Date of existing almanac	O	
			GPacc	SV accuracy	O	
			GPast	GPS fix (position, local time)	O	
			GPtst	Selftest result	O	
	GPsrq	Send GPS receiver parameters	GPssd	Answer to GPsrq	A	
	GPirq	Send data output interval	GPisd	Answer to GPirq	A	
	GPdrq	Send DGPS parameters	GPdsd	Answer to GPdrq	A	
			GPdie	DGPS status	O	
		GPclr	Restart			
	GPset	Set rx parameters				
	GPint	Set sentence output interval				
	GPdif	Set DGPS parameters				

NOTE 1: Higher priority data is output first, from top to bottom. (Highest priority:GGA for example).  
 GPDTM is always output in front of each of GGA, GLL, RMC, Gpast sentence.

O Sentence output interval is adjustable but if the back up is lost, the sentence will not be output.

OO Sentence output interval is adjustable and if the back up is lost, it goes back to the default value, which is one second interval.

A Sentence is output as an answer.

XXAny talker ID

### 3.5 LIST OF PARAMETERS & BACKED-UP DATA

	Data	Backed-up	Default	Range
GPS Data	Estimated position Lat. Long.	Yes	N34deg.44.0000 min. E135deg.21.0000 min.	S90deg. to N90deg. W180deg. to E180deg.
	Time	Yes	1997 Jan.1 0h.0m.12s	1997 Jan. 1 through 2040 Dec. 31
	Altitude	Yes	0 m	-999.9m to 17999.9m
	Almanac data	Yes	---	---
	Almanac date	Yes	1980 Jan. 6 0h.0m.0s	---
	Ephemeris	Yes	---	---
Parameters	Local Zone Time	Yes	+0h	-13h0m to +13h0m
	PDOP value	Yes	6	0 to 10
	Elevation Angle Mask	Yes	5 deg.	5 to 90 deg.
	Geodetic ID	Yes	1 (WGS84)	1 to 171
	Mask by Elevation Angle for Receivable Satellites Prediction	Yes	5 deg.	5 to 90 deg.
	Mask by Signal Strength	No	1dBHz (No mask)	1 to 99 dBHz
	1PPS Correction	Yes	0 $\mu$ sec	-999.9 $\mu$ sec to +999.9 $\mu$ sec
	Delete Satellites	No	00000000	00000000 to FFFFFFFF
	Smoothing Index	No	2	1 to 3
	Dynamic Index	No	2	1 to 3
	Data Output Interval	Yes	DTM,GGA,ZDA,GSV, VTG (Every second)	0-60 seconds (Only for those sentences that are adjustable. See 3.4 List of NMEA sentences.)
	DGPS parameter	Yes	1 (LSB first)	1 (LSB first) 2 (MSB first)

### 3.6 NMEA-0183 INPUT SENTENCES

#### \$XXGLL(in)

Set initial position

This sentence sets the initial latitude/longitude. The position data will be updated when position fixing begins.

#### Example

\$XXGLL	,3444.123,N	,03521.5,E	,,	* 4D	CR LF
Field#	1	2	3	4567	8

#.	Description	Range	[Bytes]
1-2.	Latitude		
	“34”:degree	00-90	[2]
	“44”: minute (integer)	00-59	[2]
	“123”: minute (fraction)	0-9999	[variable] See NOTE.
	“N”: North/South	N or S	[1]
3-4.	Longitude		
	“035”: degree	000-180	[3]
	“21”: Minute (integer)	00-59	[2]
	“5”: Minute (fraction)	0-9999	[variable] See NOTE
	“E”: East/West	E or W	[1]
	NOTE: Digits below 1/10000 are ignored.		
5-7.	Null Field	Any entry is ignored.	
8.	Checks		[2]

#### Interpreting Example

34 deg 44.123 min N  
35 deg 21.5 min E

## \$XXGGA (in)

### Set initial position

This sentence sets the initial latitude/longitude. The position data will be updated when position fixing begins.

#### Example

\$XXGGA	,	,3444.123,N	,03521.5,E	,, , , ,	* 79	CR LF
Field#123		4 5	6-14 15			

#.	Description	Range	[Bytes]
2-3.	Latitude		
	“34”:degree	00-90	[2]
	“44”: minute (integer)	00-59	[2]
	“123”: minute (fraction)	0-9999	[variable] See NOTE.
	“N”: North/South	N or S	[1]
4-5.	Longitude		
	“035”: degree	000-180	[3]
	“21”: Minute (integer)	00-59	[2]
	“5”: Minute (fraction)	0-9999	[variable] See NOTE.
	“E”: East/West	E or W	[1]
	NOTE: Digits below 1/10000 are ignored.		
6-14.	Null Fields	Any entry is ignored.	
15.	Checksum		[2]

#### Interpreting Example

34 deg 44.123 min N  
35 deg 21.5 min E



## \$XXZDA (in)

Set date/time

### Example

\$XXZDA	,123456	,01	,02	,1997	, -09	,00	* 79	CR LF
Field#	1	2	3	4	5	6	7	

#.	Description	Range	[Bytes]
1.	UTC: Time "12": hh "34": mm "56": ss	00-23 00-59 00-59	[2] [2] [2]
2.	UTC: Date "01": DD	01-31	[2]
3.	UTC: Month "02": MM	01-12	[2]
4.	UTC: Year "1997": YYYY	1997-2040	[4]
5.	Local Zone Time (Hour) "-09": hh	-13+00+13 (-/+ : East/west of date line)	[3]
6.	Local Zone Time (Minute) "00": mm	00 to 59	[2]
	NOTE: Local zone time setting is used for calculating local time when outputting GPS fix (\$PFEC,GPast): (Local Time)=(UTC)-(Local Zone Time)		
7.	Checksum		[2]

### Interpreting Example

February 1, 1997  
12:34:56  
Local Zone Time: -09:00

## \$XXRMC (in)

Set initial position/UTC

### Example

\$XXRMC	,123456	,	,3444.123,N	,13521.456,E	,,	,020197	,,,
Field#	1	2	34	567 8910 11 12			

* 69	CR LF
------	-------

13

#.	Description	Range	[Bytes]
1.	UTC: Time		
	“12”: hh	00-23	[2]
	“34”: mm	00-59	[2]
	“56”: ss	00-59	[2]
2.	Null Field	Any entry is ignored.	
3-4.	Latitude		
	“34”:degree	00-90	[2]
	“44”: minute (integer)	00-59	[2]
	“123”: minute (fraction)	0-9999	[variable] See NOTE.
	“N”: North/South	N or S	[1]
5-6.	Longitude		
	“135”: degree	000-180	[3]
	“21”: Minute (integer)	00-59	[2]
	“456”: Minute (fraction)	0-9999	[variable] See NOTE.
	“E”: East/West	E or W	[1]
	NOTE: Digits below 1/10000 are ignored.		
7-8.	Null Fields	Any entry is ignored.	
9.	UTC: Date		
	“02”: DD	01-31	[2]
	“01”: MM	01-12	[2]
	“97”: YY	97-40	[2]
		(1997-2040)	
10-12.	Null Fields	Any entry is ignored.	
13.	Checksum		[2]

### Interpreting Example

January 2, 1997

12:34:56

34 deg. 44.123 min. N

135 deg. 21.456 min. E

## \$PFEC,GPclr (in)

Restart

### Example

\$PFEC	,GPclr	,1	* 4B	CR LF
Field#1	2	3		

This sentence clears the data in the GPS receiver and restarts the receiver. The restart works in the same way as the power is first on.

#.	Description	Range	[Bytes]
1.	Command name		[5]
2.	Mode	1-3 "1": Clear mode 1 "2": Clear mode 2 "3": Clear mode 3	[1]
3.	Checksum		[2]

Receiver Data	Clear mode		
	1	2	3
Latitude/Longitude	Returned to default	Backed-up value used	Backed-up value used
Time	Backed-up value used	Backed-up value used	Backed-up value used
Almanac Data	Deleted	Backed-up value used, if valid.	Deleted
Ephemeris Data	Deleted	Backed-up value used, if avalid.	Deleted
Receiver Parameters (Note 1)	All parameters returned to default	Backed-up value used.	Backed-up value used

Note 1 Receiver parameters are those set by "\$PFEC,GPset" sentence. Refer to the "3.5. List of Parameters & Backed-up data" to see whether the value set by the sentence is backed up or not.

### Interpreting Example

Clear mode 1

**\$PFEC,GPset (in)**  
Setup receiver parameters

**Example**

\$PFEC	,GPset	,D05	,U00200000	.....	* hh	CR LF
Field#	1	2	3	4.....		

#.	Description	Range	[Bytes] (Unit) {Default}
1.	Command name		[5]
2.			
3.			
4.....			

Up to eight parameters in any order preceded by delimiter “,”(comma).  
See parameter syntax below:  
NOTE: Do not send same parameter twice within the same sentence.

**“Dnn”**: PDOP Threshold D00-D10 [3] (n/a) {D06}  
In 3D positioning mode, 2D positioning is forced when PDOP is higher than this threshold. If D00 is set, 3D positioning is not performed. In 2D positioning, the altitude is not updated and the same altitude is continuously output as set at the first 2D positioning.

**“Enn”**: Elevation Angle Mask for Receivable Satellite Prediction E05-E90 [3] (deg.) {E05}  
Since the function of “Receivable Satellite Prediction” is deleted in this model, this parameter setting is neglected.

**“Gnn”**: Geodetic ID G001-G171 [4] (n/a) {G001}

**“Hnnnnnn.n”**: Altitude for 2D positioning H-00999.9 to H017999.9 [9] (meter) {H000000.0}

NOTE: When 3D positioning is performed, this data is updated.

**“Mnn”**: Mask by Elevation Angle M05-M90 [3] (degree) {M05}  
Satellites below this angle are ignored when positioning.

**“Snn”**: Mask by Signal Strength S01-S99 [3] (dBHz) {S01}  
Satellites weaker than this level are ignored when positioning. The minimum level is practically limited by the lowest tracking signal level (38dBHz).

**“Tnnnnn”**: 1PPS Correction T-9999 to T+9999 [6] (x0.1 us) {T+0000}  
0.1us corresponds 30 meter antenna length. Note that negative setting advances 1PPS pulses.

**“Uhhhhhhh”**: Delete satellites.U0000000-UFFFFFFF [9] (n/a) {n/a}  
 hhhhhhhh means eight hexadecimal letters, representing a bit map of 32 bits. Each bit within the bit map represents one satellite; 0000001 and 8000000, for example, indicate satellite SV#1 and SV#32, respectively.

Example: “PFEC,GPset,U0000000F”<CR><LF> declares unhealthy satellites SV#1 to SV#4.

Satellites declared by this sentence are ignored when positioning. It should be noted that satellites with their bits cleared are declared as “healthy”. In the above example, satellites SV#5 to SV#32 are implicitly declared as “healthy”.

In the following example, the first sentence declares satellite SV#5 as “unhealthy”, and it is restored later by the second sentence.

Example: “PFEC,GPset,U00000010”<CR><LF>  
 “PFEC,GPset,U00000000”<CR><LF>

**“Wn”**: Smoothing Index W1-W3 [2] (n/a) {W2}

Index	Characteristics	Remarks
1	Quick responsive	Quicker response but relatively more zigzag tracking record.
2	Averaged	Averaged tuning (Initial setting)
3	Smoother tracking record	Less responsive (large inertia) but smoother tracking record

**“Xn”**: Dynamic Index X1-X3 [2] (n/a) {X2}

Index	Characteristics	Remarks
1	More accurate positioning	Higher accuracy but less frequent positioning
2	Averaged	Averaged tuning (initial setting)
3	More frequent positioning	More frequent positioning but less accuracy.

## \$PFEC,GPsrq (in)

### Get receiver parameters

Issue this sentence when you need receiver parameters set by \$PFEC,GPset. The answer will be output as \$PFEC,GPssd sentence.

\$PFEC,	,GPsrq	* 5B	CR LF
1	2		

#.	Description	Range	[Bytes]
1.	Command name		[5]
2	Checksum		[2]

## \$PFEC,GPint (in)

### Request output/Set log output intervals

#### Example

\$PFEC	,GPint	,GGA01	,GLL00	.....	* hh	CR LF
Field#	1	2	3	4.....n+1		

#.	Description	Range	[Bytes](Unit){Default}
1.	Command name		[5]
2-n.	Sentence name & interval (00-60)		[5]
n+1.	Checksum		

Up to 11 (eleven) parameters in any order preceded by delimiter “,”(comma). See parameter syntax below:

“Param”:  
 Log Output Sentence  
 <Log Output Sentence Length in bytes>

“ <b>GGAnn</b> ”:\$GPGGA<82 max>	GGA00-GGA60	[5](sec){GGA01}
“ <b>ZDAnn</b> ”:\$GPZDA<36>	ZDA00-ZDA60	[5](sec){ZDA01}
“ <b>GLLnn</b> ”:\$GPGLL<47>	GLL00-GLL60	[5](sec){GLL00}
“ <b>GSAAnn</b> ”:\$GPGSA<69 max>	GSA00-GSA60	[5](sec){GSA00}
“ <b>GSVnn</b> ”:\$GPGSV<70 max>	GSV00-GSV60	[5](sec){GSV01}
“ <b>VTGnn</b> ”:\$GPVTG<46 max>	VTG00-VTG60	[5](sec){VTG01}
“ <b>RMCnn</b> ”:\$GPRMC<77 max>	RMC00-RMC60	[5](sec){RMC00}
“ <b>ancnn</b> ”:\$PFEC,GPanc<62>	anc00-anc60	[5](sec){anc00}
“ <b>accnn</b> ”:\$PFEC,GPacc<49>	acc00-acc60	[5](sec){acc00}
“ <b>astnn</b> ”:\$PFEC,GPast<85>	ast00-ast60	[5](sec){ast00}
“ <b>tstnn</b> ”:\$PFEC,GPtst<33>	tst00-tst60	[5](sec){tst00}
“ <b>dienn</b> ”:\$PFEC,GPdie<27>	die00-die60	[5](sec){die00}

NOTE: If zero interval (nn=00) is specified, that sentence is output once when \$PFEC,GPint is executed, then output is disabled.

GN-79N can output 480 bytes or so per second. Do not set the log sentence output intervals too short, or this capacity will be exceeded. When estimating the output volume, refer to byte count of each sentence enclosed within [ ] in the above list.

#### Example

\$PFEC,GPint,tst00<CR><LF>Output self-test result once.  
 \$PFEC,GPint,RMC05<CR><LF> ....Output \$GPRMC sentence every five seconds.

## \$PFEC,GPirq (in)

### Get log sentence output intervals

Issue this sentence when you need the log sentence output intervals set by \$PFEC,GPint. The answer will be output as \$PFEC,GPisd sentence.

\$PFEC,	,GPirq	* 41	CR LF
1	2		

#.	Description	Range	[Bytes]
1.	Command name		[5]
2.	Checksum		[2]



**\$PFEC,GPdif (in)**

**Set DGPS parameter**

**Example**

\$PFEC	,GPdif	,D0	* 18	CR LF
Field#	1	2	3	

#.	Description	Range	[Bytes]
1.	Command name		[5]
2.	Bit Stream Direction of RTCM SC-104 DGPS data.	D0-D1 "D0": MSB first "D1": LSB first	[2]
3.	Checksum		[2]

**Interpreting Example**

DGPS data will be transmitted from MSB.

## \$PFEC,GPdrq (in)

### Get DGPS parameter

Issue this sentence when you need the DGPS parameter set by \$PFEC,GPdif. The answer will be output as \$PFEC,GPdsd sentence.

\$PFEC,	,GPdrq	* 4C	CR LF
1	2		

#.	Description	Range	[Bytes]
1.	Command name		[5]
2.	Checksum		[2]

### 3.7 NMEA-0183 OUTPUT SENTENCES

#### \$GPDTM (out)

Datum

#### Example

\$GPDTM	,TOY	,M	,00.1697	,S	,00.1234	,E	,,W84	* 05	CR LF
Field#	123	45	678	9					

#.	Description	Range	[Bytes]
1.	Local datum code		[3]
2.	Local datum sub code		[1]
3.	Latitude offset (minute)		[7]
4.	Latitude offset mark (N: +, S: -)		[1]
5.	Longitude offset (minute)		[7]
6.	Longitude offset mark (E: +, W: -)		[1]
7.	Altitude offset (m)	Always null	
8.	Datum	Always "W84"	[3]
9.	Checksum		[2]

#### Interpreting Example

Datum 172 (Refer to page 48-52)

## \$GPGGA (out)

Position, altitude, UTC, etc.

### Example

\$GPGGA	,123456	,3444.0000,N	,13521.0000,E			
Field#	1	2	3	4	5	
	,1	,04	,02.00	,000123.0	,M	,0036.0
	6	7	8	9	10	11
		,M	,13	,0001	* 76	CR LF
	12	13	14	15		

#.	Description	Range	[Bytes]
1.	UTC		
	“12”: hh	00-23	[2]
	“34”: mm	00-59	[2]
	“56”: ss	00-59	[2]
2-3.	Latitude		
	“34”: degree	0-90	[2]
	“44”: minute (integer)	0-59	[2]
	“0000”: minute (fraction)	0000-9999	[4]
	“N”: North/South	N or S	[1]
4-5.	Longitude		
	“135”: degree	000-180	[3]
	“21”: Minute (integer)	00-59	[2]
	“0000”: Minute (fraction)	0000-9999	[4]
	“E”: East/West	E or W	[1]
6.	GPS Quality Indication	0-2	[1]
	“0”: Fix not available or invalid.		
	“1”: GPS. SPS fix valid		
	“2”: GPS. SPS fix valid		
7.	No. of satellites used for positioning	00-12	[2]
8.	DOP (2D: HDOP3D: PDOP)	n/a	[5]
	NOTE: “00.00” is output while positioning is interrupted.		
9.	Altitude	-00999.9 to 017999.9	[8]
10.	Unit for Altitude	M	[1]
11.	Geoide Altitude	-999.9 to 9999.9	[6]
12.	Unit for Geoide Altitude	M	[1]
13.	DGPS Data Time	00-99	[2]

This value indicates the time elapsed since the last RTCM-SC104 TYPE 1 or 9 data is updated. Unless DGPS mode is selected, a null field is output.

14.	DGPS Station ID	0000-1023	[4]
	Unless DGPS mode is selected, a null field is output.		
15.	Checksum		[2]

### **Interpreting Example**

UTC 12:34:56  
34 deg 44.0000 min N  
135 deg 21.0000 min E  
Status: Stand-alone GPS  
No. of satellites: 4 satellites  
DOP: 2.00  
Altitude: 123.0 meters high  
Geoide Altitude: 36.0 meters high  
DGPS Data Time: 13  
DGPS Station ID: 1

## \$GPZDA (out)

Date/Time

### Example

\$GPZDA	,123456	,01	,02	,1997	,+09	,00	* 6B	CR LF
Field#	1	2	3	4	5	6 7		

#.	Description	Range	[Bytes]
1.	UTC: Time		
	“12”: hh	00-23	[2]
	“34”: mm	00-59	[2]
	“56”: ss	00-59	[2]
2.	UTC: Day of Month		
	“01”: DD	01-31	[2]
3.	UTC: Month		
	“02”: MM	01-12	[2]
4.	UTC: Year		
	“1997”: YYYY	1997-2040	[4]
5.	Local Zone Time (Hour)		
	“+09”: hh	-13+00+13	[3]
		(-/+ : East/west of date line)	
6.	Local Zone Time (Minute)		
	“00”: mm	00 to 59	[2]
	NOTE: Local zone time setting is used for calculating local time when outputting \$PFEC,GPast:		
	(Local Time)=(UTC)(Local Zone Time)		
7.	Checksum		[2]

### Interpreting Example

February 1, 1997

12:34:56

Local Zone Time: +09:00

## **\$GPGLL (out)**

Position, UTC, etc.

### Example

\$GPGLL	,3444.1234,N	,03521.0000,E	,123456	,A	,A	* 43	CR LF
Field#	1	2	34	5	67	8	

#.	Description	Range	[Bytes]
1-2.	Latitude		
	“34”:degree	00-90	[2]
	“44”: minute (integer)	00-59	[2]
	“1234”: minute (fraction)	0000-9999	[4]
	“N”: North/South	N or S	[1]
3-4.	Longitude		
	“035”: degree	000-180	[3]
	“21”: Minute (integer)	00-59	[2]
	“0000”: Minute (fraction)	0000-9999	[4]
	“E”: East/West	E or W	[1]
5.	UTC		
	“12”: hh	00-23	[2]
	“34”: mm	00-59	[2]
	“56”: ss	00-59	[2]
6.	Status	A or V	[1]
		“A”: Data Valid (Stand-alone or DGPS)	
		“V”: Navigation receiver warning	
7.	Position System Mode Indication	A: Autonomous mode [1] D: Differential mode N: Data not valid	
8.	Checksum		[2]

### Interpreting Example

34 deg 44.1234 min N  
35 deg 21.0000 min E  
UTC: 12:34:56  
Status: Positioning

## \$GPGSA (out)

### Positioning status

#### Example

\$GPGSA	,A	,3	,01	,02	,03	.....	,02.00	,03.00	,04.00	* hh	CR LF
Field#	12	3	456.....	1516	1718						

#.	Description	Range	[Bytes]
1.	Operational Mode	M or A "M": 2D-only Mode "A": 2D/3D Auto-switching Mode	[1]
2.	Mode	1-3 "1": Fix not available "2": 2D-positioning "3": 3D-positioning	[1]
3-14.	Satellite Numbers used for positioning NOTE: A null field is output unless a satellite is available.	01-32	[2] or [0]
15.	PDOP NOTE: "00.00" is output unless 3D-positioning is performed.	n/a	[5]
16.	HDOP NOTE: "00.00" is output while positioning is interrupted.	n/a	[5]
17.	VDOP NOTE: "00.00" is output unless 3D-positioning is performed.	n/a	[5]
18.	Checksum		[2]

#### Interpreting Example

2D/3D Auto-switching Mode  
3D-Positioning  
Satellites used: 01,02,03....  
PDOP: 2.00  
HDOP: 3.00  
VDOP: 4.00



## \$GPGSV (out)

### Satellite details

#### Example

\$GPGSV	,2	,1	,06	,01	,05	,234	,56
Field#	1	2	3	4	5	6	7
,04	,11	,223	,44				
8	9	10	11				
,01	,75	,088	,32				
12	13	14	15				
,01	,42	,234	,48	* 75	CR	LF	
16	17	18	19	20			

#.	Description	Range	[Bytes](unit)
1.	Total No. of Messages	1-3	[1](n/a)
2.	No. of Message	1-3	[1](n/a)
3.	No. of satellites in line-of-site (with elevation angle higher than 5 degrees only)	00-12	[2](n/a)
4.	1st Sat. SV#	01-32	[2]
5.	1st Sat. Elevation Angle	05-90	[2](degree)
6.	1st Sat. Bearing Angle	000-359	[3](degree)
7.	1st Sat. SNR(Signal/Noise Ratio)(C/No)	00-99	[2](dBHz)
8-11.	2nd Sat. Details		[9]
12-15.	3rd Sat. Details		[9]
16-19.	4th Sat. Details		[9]
20.	Checksum		[2]

In this sentence, a maximum of four satellite details is indicated per each output. Five or more satellite details are output in the 2<sup>nd</sup> or 3<sup>rd</sup> messages. When there is only one to three satellite details, the checksum <CR> <LF> is issued immediately after Sat. SV#, Sat. Elevation Angle, Sat. Bearing Angle and SNR.

## \$GPVTG (out)

Course and speed

### Example

\$GPVTG	,012.3,T	,001.1,M	,001.2,N	,0002.2,K	,A	* 10	CR LF
---------	----------	----------	----------	-----------	----	------	-------


Field#12 346 7 89 10

#.	Description	Range	[Bytes](unit)
1-2.	True Course		
	"012.3"	000.0-359.9	[5](degree)
	"T"(meaning TRUE)	T	[1](n/a)
	NOTE: A null field is output unless true course information is available.		
3-4.	Magnetic Course		
	"001.1"	000.0-359.9	[5](degree)
	"M"(meaning MAGNETIC)	M	[1](n/a)
	NOTE: A null field is output unless magnetic course information is available.		
5-6.	Speed (kts)		
	"001.2"	000.0-999.9	[5](kts)
	"N"(meaning kNot)	N	[1](n/a)
	NOTE: A null field is output unless speed information is available.		
7-8.	Speed (km/h)		
	"0002.2"	0000.0-9999.9	[6](km/h)
	"K"(meaning Km/h)	K	[1](n/a)
	NOTE: A null field is output unless speed information is available.		
9.	Position System Mode Indicator	A: Autonomous mode D: Differential mode N: Data not valid	[1]
10.	Checksum		[2]

## \$GPRMC (out)

UTC, position, course, speed, etc.

### Example

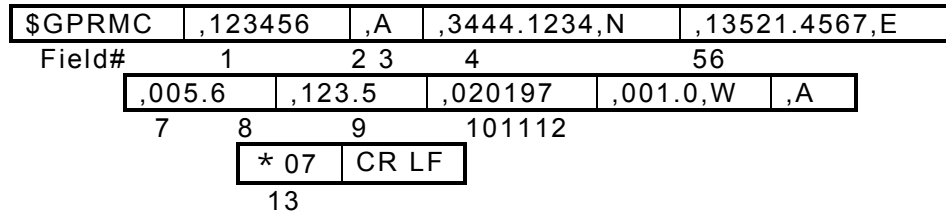

#.	Description	Range	[Bytes]
1.	UTC: Time		
	“12”: hh	00-23	[2]
	“34”: mm	00-59	[2]
	“56”: ss	0-59	[2]
2.	Status	A or V	[1]
		“A”: Data valid (Stand-alone or DGPS)	
		“V”: Navigation receiver warning	
3-4.	Latitude		
	“34”:degree	00-90	[2]
	“44”: minute (integer)	00-59	[2]
	“1234”: minute (fraction)	0000-9999	[4]
	“N”: North/South	N or S	[1]
5-6.	Longitude		
	“135”: degree	000-180	[3]
	“21”: Minute (integer)	00-59	[2]
	“4567”: Minute (fraction)	0000-9999	[4]
	“E”: East/West	E or W	[1]
7.	Speed (kts)		
	“005.6”	000.0-999.9	[5]
	NOTE: A null field is output unless speed information is available.		
8.	True Course (degree)		
	“123.5”	000.0-359.9	[5]
	NOTE: A null field is output unless true course information is available.		
9.	UTC: Date		
	“02”: DD	01-31	[2]
	“01”: MM	01-12	[2]
	“97”: YY	97-40	[2]
		(1997-2040)	
10-11.	Magnetic Deviation (degree)		
	“001.0”	000.0-180.0	[5]
	“W”	W or E	[1]
		“W”: West (MAG=TRUE-DEV)	
		“E”: East (MAG=TRUE+DEV)	
12.	Positioning System Mode Indication	A: Autonomous mode	[1]
		D: Differential mode	
		N: Data not valid	
13.	Checksum		[2]
	8 bits data between “\$” and “*” (excluding “\$” and “*”) are XORed, and the result is converted to 2 bytes of hexadecimal letters. Only RMC sentences are transmitted with checksum. All other output sentences do not include checksum fields.		

## Interpreting Example

UTC Time 12:34:56

Positioning

34 deg. 44.1234 min. N

135 deg. 21.4567 min. E

Speed: 5.6 kts

True Course: 123.5 degrees

UTC Date Jan 2, 1995

Magnetic Deviation: 1.0 degree, West

## \$PFEC,GPanc (out)

Almanac date and satellite's health condition

### Example

		Column 1		32		
\$PFEC	,GPanc	,970102030405	,2222220022222222222222000000222221	* 4B	CR LF	
Field#		2	3		4	

- | #. | Description   | Range   | [Bytes] |
|----|---|---|---------|
| 1. | Command name  |   | [5]     |
| 2. | Almanac Date/Time (Local Date/Time)<br>"970102030405": YYMMDDhhmmss |   | [12]    |
| 3. | Health conditions for 32 satellites                                 | 0-2<br>"0": Almanac not collected yet,<br>or that satellite is not launched yet.<br>"1": Unhealthy (Not used for positioning).<br>"2": Healthy (Usable for positioning) | [32]    |
|    | Each column represents each satellite.                              |   |         |
| 4. | Checksum  |   | [2]     |

### Interpreting Example

Almanac is obtained on Jan. 2, 1997 at 03h:04m:05s

SV#1 healthy  
SV#2 healthy  
SV#3 healthy  
SV#4 healthy  
SV#5 healthy  
SV#6 healthy  
SV#7 unhealthy  
SV#8 unhealthy  
SV#9 healthy  
.....

## \$PFEC,GPacc (out)

SV(satellite) Accuracy

### Example

	Column 1		32		
\$PFEC	,GPacc	,22222XXXXXXXXXX77777XXXXXXXXXXBF	* 0D	CR	LF
Field# 1		2	3		

- | #. | Description                            | Range  | [Bytes] |
|----|--|--|---------|
| 1. | Command name                           |  | [5]     |
| 2. | SV accuracies for 32 satellites        |  | [32]    |
|    |  | 0-F: SV Accuracy in hexadecimal notation<br>X: SV Accuracy not available |         |
|    | Each column represents each satellite. |  |         |
| 3. | Checksum                               |  | [2]     |

### Interpreting Example

SV#1      2  
SV#2      2  
SV#3      2  
SV#4      2  
SV#5      2  
SV#6      2  
SV#7      data not available  
SV#8      data not available  
SV#9      data not available  
.....

## \$PFEC,GPast (out)

Position, altitude, speed, course, local time, etc.

### Example

\$PFEC	,GPast	,4	,6	,1	,0356			
Field#12 3 4 5								
,N34431234		,E135211234		,0012347				
6		7		8				
,970123123456			,01235		,1234	,1345	* 65	CR LF
9			10		11	12	13	

#.	Description	Range	[Bytes]
1.	Command name		[5]
2.	Status "4"	0,3-6 "0": Positioning not performed yet "3": Stand-alone GPS, 2D "4": Stand-alone GPS, 3D "5": DGPS 2D "6": DGPS 3D	[1]
3.	No. of satellites used for positioning (0-9, A-C) "6"	0-9 A: 10 B: 11 C: 12	[1]
4.	Seed/course calculation status "1"	0-1 "0": Data invalid (Can't calculate) "1": Data valid	[1]
5.	DOP x100 (2D: HDOP3D: PDOP) "0356" NOTE: For actual DOP, divide the above value by 100. "0000" is output while positioning is interrupted.	0000-9999	[4]
6.	Latitude "N": North/South "34": degree "43": minute (integer) "1234": minute (fraction)	N or S 00-90 00-59 0000-9999	[1] [2] [2] [4]
7.	Longitude "E": East/West "135": degree "21": Minute (integer) "1234": Minute (fraction)	E or W 000-179 00-59 0000-9999	[1] [3] [2] [4]
8.	Altitude (x10m) "0012347" NOTE: For actual altitude, divide the above value by 10.	-009999 to 0179999	[7]
9.	Local Date/Time "940123123456": YYMMDDhhmmss NOTE: (Local date/time)=(UTC)-(Local Zone Time) Unless local zone time information is available, UTC is output.	n/a	[12]

10. Speed (x10 km/h)  
 "01235" 00000-18519 [5]  
 NOTE: For actual speed, divide the above value by 10.  
 If speed/course calculation status (field#4) is "0"(invalid), previous output value is held.
11. True Course (x10 degrees)  
 "1234" 0000-3599 [4]  
 NOTE: For actual course, divide the above value by 10.  
 If speed/course calculation status (field#4) is "0"(invalid), output value is held.
12. Magnetic Course (x10 degrees)  
 "1345" 0000-3599 [4]  
 NOTE: For actual course, divide the above value by 10.  
 If speed/course calculation status (field#4) is "0"(invalid), output value is held.
13. Checksum [2]



## \$PFEC,GPtst (out)

### Self-test results

#### Example

\$PFEC	,GPtst	,0	,4850280001	,08	* 19	CR LF
Field#	1	2	3	4	5	6

#.	Description	Range	[Bytes](unit)
1.	Command name		[5]
2.	Status	0-1 "0": Testing now "1": Completed	[1]
3.	Program and Version Numbers		
	"4850280": Program No.	n/a	[7]
	"001": Version No.	n/a	[3]
4-5.	Self-test Results		
	"0": Result of Test I	0-1 "0": Normal "1": GPS data backup error (Including RTC back-up error)	[1]
	"8": Result of Test II	0-F	[1]

Code	Rx Param Backup	Antenna Error	RAM	ROM
"1"	ok	ok	ok	error
"2"	ok	ok	error	ok
"3"	ok	ok	error	error
"4"	ok	error	ok	ok
"5"	ok	error	ok	error
"6"	ok	error	error	ok
"7"	ok	error	error	error
"8"	error	ok	ok	ok
"9"	error	ok	ok	error
"A"	error	ok	error	ok
"B"	error	ok	error	error
"C"	error	error	ok	ok
"D"	error	error	ok	error
"E"	error	error	error	ok
"F"	error	error	error	error

6. Checksum	[2]
-------------	-----

## \$PFEC,GPssd (Answer to \$PFEC,GPsrq)

Receiver parameters set by \$PFEC,GPset

### Example

\$PFEC	,GPssd	,G001	.....	* hh	CR LF
Field#	1	2 3.....			

\$PFEC	,GPssd	,D08	.....	* hh	CR LF
Field#	12 3.....n+1				

#.	Description-	Range	[Bytes]
1.	Command name		[5]
2-n.	Receiver parameters set by \$PFEC,GPset are output in two sentences. Each parameter is preceded by delimiter “,” (comma).		
n+1.	Checksum		[2]

## \$PFEC,GPisd (Answer to\$PFEC,GPirq)

Log output intervals set by \$PFEC,GPint

### Example

\$PFEC	,GPisd	,GGA01	.....	* hh	CR LF
Field#		2	3..... n+1		

\$PFEC	,GPisd	,tst00	.....	* hh	CR LF
Field#		2	3..... n+1		

#.	Description	Range	[Bytes]
1.	Command name		[5]
2-n.	Log output intervals set by \$PFEC,GPint are output in two sentences. Each parameter is preceded by delimiter “,” (comma).		
n+1.	Checksum		[2]

## \$PFEC,GPdsd (Answer to \$PFEC,GPdrq)

DGPS parameters set by \$PFEC,GPdif

DGPS parameters set by \$PFEC,GPdif are output.

### Example

\$PFEC	,GPdsd	,D0	* 02	CR LF
Field#	1 2	3		

#.	Description	Range	[Bytes]
1.	Command name		[5]
2.	DGPS parameters set by \$PFEC,GPdif are output.		
3.	Checksum		[2]

**\$PFEC,GPdie (out)**  
Receiver status

**Example**

\$PFEC	,GPdie	,1	,08	,0	,0	,0	* 66	CR LF
Field#	1 2 3 4 5 6			7				

- | #. | Description   | Range  | [Bytes] |
|----|---|--|---------|
| 1. | Command name  |  | [5]     |
| 2. | DGPS status   | 0-1<br>"0": DGPS data not received yet<br>"1": Receiving DGPS data | [1]     |
|    | NOTE: This flag will be set a few seconds after DGPS data entry.                            |  |         |
| 3. | No. of DGPS Satellites<br>"08"  | n/a  | [2]     |
| 4. | DGPS Base station's Health Condition<br>"0"   | 0-1<br>"0": healthy<br>"1": unhealthy                              | [1]     |
|    | NOTE: If DGPS station is unhealthy, stand-alone GPS function rather than DGPS is performed. |  |         |
| 5. | DGPS Data Status<br>"0"   | 0-1<br>"0": Normal<br>"1": Abnormal                                | [1]     |
|    | NOTE: If DGPS data is invalid, stand-alone GPS function rather than DGPS is performed.      |  |         |
| 6. | DGPS Error Code<br>"0"  | 0-F  | [1]     |

Error code	Meaning
0	No error
1	In Type 1, Type 3 or Type 9 messages, the base station's health field indicates "unhealthy".
2	In Type 1 message, UDRE field indicates "3" meaning not usable due to big error.
3	3 or less satellites are available for differential data input
4 to F	Reserved

- |    |          |     |
|----|----------|-----|
| 7. | Checksum | [2] |
|----|----------|-----|

**Common Errors**

If DGPS status (field# 2) can not set to "1"(Receiving DGPS data), or if DGPS fix is not obtainable, suspect:

- \* Invalid format of incoming DGPS data
- \* Insufficient number of satellites in DGPS data
- \* DGPS station is faulty
- \* DGPS data is too old to correct positioning

## \$PFEC,GPspe,ANCOUT (in)

### Down-load almanac

Issue this sentence when you need the almanac data from GN-79N.

\$PFEC,GPspe,ANCOUT	* 63	CR LF
---------------------	------	-------

As an answer to the above sentence, GN-79N outputs internal almanac data (about 6.0K bytes of ASCII characters) in the following format.

Note that, after this sentence is received, the GN-79N stops positioning, receiving data, and outputting the other data than almanac data. After outputting the almanac data, the GN-79N will restart automatically (Restart clear mode 2).

#### Example:

#GP,TYP=GP77,	90A927FDE.....980FE3	#GP,END	CR LF
---------------	----------------------	---------	-------

You may save the downloaded almanac for future uploading.

## \$PFEC,GPspe,ANCINP (in)

### Up-load almanac

Issue this sentence when you want to send almanac data to GN-79N. This function enables quicker Time-To-First-Fix.

\$PFEC,GPspe,ANCINP	* 7A	CR LF
---------------------	------	-------

Following the above sentence, send almanac data which you saved by \$PFEC,GPspe,ANCOUT before:

#GP,TYP=GP79	90A927FDE.....980FE3	#GP,END	CR LF
--------------	----------------------	---------	-------

If uploading is completed successfully, GN-79N outputs the following acknowledgment and restarts by itself (Restart clear mode 2).

\$ANC, OK	CR LF
-----------	-------

If uploading is failed, GN-79N requests you to send the entire almanac sentence again by outputting the following error message:

\$ANC,NG	CR LF
----------	-------

“NG” means No Good.

## 5. GEODETIC ID

There are many geodetic systems in the world. Enter a right geodetic system ID in accordance with your chart or map in use. If the geodetic ID you entered differs from the geodetic system employed in your chart or map, GPS fixes may be deviated from the actual position on the chart or map.

### IDGeodetic System

001:	W84: WGS 84		
002:	W72: WGS 72		
*003:	TOY-M: TOKYO	(Go to 172)	:Mean Value (Japan, Korea & Okinawa)
004:	NAS-C: NORTH AMERICAN 1927		:Mean Value
005:	EUR-M: EUROPEAN 1950		:Mean Value
006:	AUG: AUSTRALIAN GEODETIC 1984		:Australia and Tasmania Island
007:	ADI-M: ADINDAN		:Mean Value (Ethiopia & Sudan)
008:	ADI-A:		:Ethiopia
009:	ADI-C:		:Mali
010:	ADI-D:		:Senegal
011:	ADI-B:		:Sudan
012:	AFG: AFG		:Somalia
*013:	AIN-A: AIN EL ABD 1970	(Go to 173)	:Bahrain Islands
014:	ANO: ANNA 1 ASTRO 1965		:Cocos Island
015:	ARF-M: ARC 1950		:Mean Value
016:	ARF-A:		:Botswana
017:	ARF-B:		:Lesotho
018:	ARF-C:		:Malawi
019:	ARF-D:		:Swaziland
020:	ARF-E:		:Zaire
021:	ARF-F:		:Zambia
022:	ARF-G:		:Zimbabwe
*023:	ARS-M: ARC 1960	(Go to174)	:Mean Value (Kenya & Tanzania)
*024:	ARS-A:	(Go to 175)	:Kenya
*025:	ARS-B:	(Go to 176)	:Tanzania
*026:	ASC: ASCENSION ISLAND 1958	(Go to177)	:Ascension Island
027:	ATF: ASTRO BEACON "E"		:Iwo Jima Island
028:	TRN: ASTRO B4 SOR. ATOLL		:Tern Island
029:	SHB: ASTRO POS 71/4		:St. Helena Island
030:	ASQ: ASTRONOMIC STATION 1952		:Marcus Island
031:	AUA: AUSTRALIAN GEODETIC 1966		:Australia and Tasmania Island
032:	IBE: BELLEVUE ( IGN )		:Efate and Erromango Islands
033:	BER: BERMUDA 1957		:Bermuda Islands
034:	BOO: BOGOTA OBSERVATORY		:Colombia
035:	CAI: CAMPO INCHAUSPE		:Argentina
036:	CAO: CANTON ISLAND 1966		:Phoenix Islands
037:	CAP: CAPE		:South Africa
*038:	CAC: CAPE CANAVERAL	(Go to 178)	:Mean Value (Florida & Bahama Islands)
039:	CGE: CARTHAGE		:Tunisia
040:	CHI: CHATHAM 1971		:Chatham Island (New Zealand)
041:	CHU: CHUA ASTRO		:Paraguay
042:	COA: CORREGO ALEGRE		:Brazil
043:	BAT: DJAKARTA ( BATAVIA )		:Sumatra Island (Indonesia)
044:	GIZ: DOS 1968		:Gizo Island (New Georgia Islands)
*045:	EAS: EASTER ISLAND 1967	(Go to 179)	:Easter Island
046:	EUR-A: EUROPEAN 1950		:Western Europe
047:	EUR-E:		:Cyprus
048:	EUR-F:		:Egypt




049:EUR-G:		:England, Scotland, Channel, Scotland, & Shetland Islands
050:EUR-K:		:England, Ireland, Scotland, & Shetland Islands
051:EUR-B:		:Greece
052:EUR-H:		:Iran
053:EUR-I:		:Italy--Sardinia
054:EUR-J:		:Italy--Sicily
055:EUR-C:		:Norway and Finland
*056:EUR-D:	(Go to 180)	:Portugal and Spain
057:EUS:	EUROPEAN 1979	:Mean Value
058:GAA:	GANDAJIKI BASE	:Republic of Maldives
059:GEO:	GEODETIC DATUM 1949	:New Zealand
060:GUA:	GUAM 1963	:Guam Island
061:DOB:	GUX 1 ASTRO	:Guadalcanal Island
062:HJO:	HJORSEY 1955	:Iceland
063:HKD:	HONG KONG 1963	:Hong kong
064:INF-A:	INDIAN	:Thailand and Vietnam
065:IND-B:		:Bangladesh, India, and Nepal
066:IRL:	IRELAND 1965	:Ireland
067:IST:	ISTS 073 ASTRO 1969	:Diego Garcia
*068:JOH:	JOHNSTON ISLAND 1961	(Go to 181) :Johnston Island
069:KAN:	KANDAWALA	:Sri Lanka
070:KEG:	KERGUELEN ISLAN	:Kerguelen Island
071:KEA:	KERTAUI 1948	:West Malaysia and Singapore
072:REU:	LA REUNION	:Mascarene Island
073:LCF:	L.C. 5 ASTRO	:Cayman Brac Island
074:LIB:	LIBERIA 1964	:Liberia
075:LUZ-A:	LUZON	:Philippines (Excluding Mindanao Island)
076:LUZ-B:		:Mindanao Island
077:MIK:	MAHE 1971	:Mahe Island
078:SGM:	MARCO ASTRO	:Salvage Islands
079:MAS:	MASSAWA	:Eritrea (Ethiopia)
080:MER:	MERCHICH	:Morocco
081:MID:	MIDWAY ASTRO 1961	:Midway Island
082:MIN-B:	MINNA	:Nigeria
083:NAH-A:	NAHRWAN	:Masirah Island (Oman)
084:NAH-B:		:UnitedArab Emirates
*085:NAH-C:		(Go to 182) :Saudi Arabia
086:SCK:	NAMIBIA	:Namibia
*087:NAP:	NAPARIMA, BWI	(Go to 183) :Trinidad and Tobago
088:NAS-B:	NORTH AMERICAN 1927	:Western United States
089:NAS-A:		:Eastern United States
090:NAS-D:		:Alaska
091:NAS-Q:	:Bahamas(Excluding San Salvador Island)	
092:NAS-R:		:Bahamas---San Salvador Island
093:NAS-E:		:Canada (Including Newfoundland Island)
094:NAS-F:		:Alberta and British Columbia
095:NAS-G:	:East Canada	
096:NAS-H:		:Manitoba and Ontario
097:NAS-I:		:Northwest Territories and Saskatchewan
098:NAS-J:		:Yukon
099:NAS-O:		:Canal Zone
*100:NAS-P:		(Go to 184) :Caribbean
101:NAS-N:		:Central America
102:NAS-T:		:Cuba
103:NAS-U:		:Greenland
104:NAS-L:		:Mexico
105:NAR-A:	NORTH AMERICAN 1983	:Alaska
106:NAR-B:		:Canada
107:NAR-C:	:CONUS	
108:NAR-D:	:Mexico, Central America	

109:FLO:	OBSERVATORIO 1966		:Corvo and Flores Islands (Azores)
110:OEG:	OLD EGYPTIAN 1930		:Egypt
111:OHA-M:	OLD HAWAIIAN		:Mean Value
112:OHA-A:			:Hawaii
113:OHA-B:			:Kauai
114:OHA-C:			:Maui
*115:OHA-D:		(Go to 185)	:Oahu
116:FAH:	OMAN		:Oman
117:OGB-M:	ORDNANCE SURVEY OF GREAT BRITAIN 1936:		Mean Value
118:OGB-A:			:England
119:OGB-B:			:England, Isle of Man, and Wales
120:OGB-C:			:Scotland and Shetland Islands
121:OGB-D:			:Wales
122:PLN:	PICO DE LAS NIEVIES		:Canary Islands
123:PIT:	PITCAIRN ASTRO 1967		:Pitcairn Island
124:HIT:	PROVISIONAL SOUTH CHILEAN 1963		:South Chile (near 53 ° S)
125:PRP-M:	PROVISIONAL SOUTH AMERICAN 1956		:Mean Value
126:PRP-A:			:Bolivia
127:PRP-B:			:Chile---Northern Chile (near 19 ° S)
128:PRP-C:			:Chile---Southern Chile (near 43 ° S)
129:PRP-D:			:Colombia
130:PRP-E:			:Ecuador
131:PRP-F:			:Guyana
132:PRP-G:			:Peru
133:PRP-H:			:Venezuela
134:PUR:	PUERTO RICO		:Puerto Rico and Virgin Islands
135:QAT:	QATAR NATIONAL		:Qatar
136:QUO:	QORNOQ		:South Greenland
137:MOD:	ROME 1940		:Sardinia Islands
138:SAO:	SANTA BRAZ		:Sao Miguel, Santa Maria Islands (Azores)
139:SAE:	SANTO (DOS)		:Espirito Santo Island
*140:SAP:	SAPPER HILL 1943	(Go to 186)	:East Falkland Island
141:SAN-M:	SOUTH AMERICAN 1969		:Mean Value
142:SAN-A:			:Argentina
143:SAN-B:			:Bolivia
144:SAN-C:			:Brazil
145:SAN-D:			:Chile
146:SAN-E:			:Colombia
147:SAN-F:			:Ecuador
148:SAN-G:	:Guyana		
149:SAN-H:			:Paraguay
150:SAN-I:			:Peru
151:SAN-K:			:Trinidad and Tobago
152:SAN-L:			:Venezuela
153:SOA:	SOUTH ASIA		:Singapore
154:POS:	SOUTHEAST BASE		:Porto Santo and Madeira Islands
155:GRA:	SOUTHWEST BASE		:Faial, Graciosa, Pico, Sao Jorge and Terceira Islands
*156:TIL:	TIMBALAI1948	(Go to 187)	:Brunei and East Malaysia (Sarawak and Sabah)
*157:TOY-A:	TOKYO	(Go to 188)	:Japan
*158:TOY-B:		(Go to 189)	:Korea
*159:TOY-C:		(Go to 190)	:Okinawa
160:TDC:	TRISTAN ASTRO 1968		:Tristan da Cunha
161:MVS:	VITI LEVU 1916		:Viti Levu Island ( Fiji Islands )
*162:ENW:	WAKE-ENIWETOK 1960	(Go to 191)	:Marshall Islands
163:ZAN:	ZANDERIJ		:Suriname
164:BUR:	BUKIT RIMPAH		:Bangka and Belitung Islands (Indonesia )
165:CAZ:	CAMP AREA ASTRO		:Camp McMurdo Area, Antarctica
166:GSE:	G. SEGARA		:Kalimantan Island ( Indonesia )
167:HEN:	HERAT NORTH		:Afghanistan
*168:HTN:	HU-TZU-SHAN(Go to 192)		:Taiwan

169:TAN:	TANANARIVE OBSERVATORY 1925	:Madagascar
170:YAC:	YACARE	:Uruguay
171:999:	RT90	:Sweden
172:TOY-M:	TOKYO	:Mean Value (Japan, Korea,and Okinawa)
173:AIN-A:	AIN EL ABD 1970	:Bahrain Island
174:ARS-M:	ARC 1960	:Mean Value (Kenya, Tanzania)
175:ARS-A:		:Kenya
176:ARS-B:		:Tanzania
177:ASC:	ASCENSION ISLAND 1958	:Ascension Island
178:CAC:	CAPE CANAVERAL	:Mean Value (Florida and Bahama Islands)
179:EAS:	EASTER ISLANDS 1967	:Easter Island
180:EUR-D:	EUROPEAN 1950 (Cont'd)	:Portugal and Spain
181:JOH:	JHONSTON ISLAND 1961	:Jhonston Island
182:NAH-C:	NAHRWAN	:Saudi Arabia
183:NAP:	NAPARIMA, BWI	:Trinidad and Tobago
184:NAS-P:	NORTH AMERICAN 1927 (Cont'd)	:Caribbean
185:OHA-D:	OLD HAWAIIAN	:Oahu
186:SAP:	SAPPER HILL 1943	:East Falkland Island
187:TIL:	TIMBALAI 1948	:Brunei and East Malaysia (Sarawak and Sabah)
188:TOY-A:	TOKYO	:Japan
189:TOY-B:	TOKYO	:South Korea
190:TOY-C:	TOKYO	:Okinawa
191:ENW:	WAKE-ENIWETOK 1960	:Marshall Islands
192:HTN:	HU-TZU-SHAN	:Taiwan

\* 193 through 200 are reserved

201:ADI-E:	ADINDAN	:Burkina Faso
202:ADI-F:	ADINDAN	:Cameroon
203:ARF-H:	ARC 1950	:Burundi
204:PHA:	AYABELLE LIGHTHOUSE	:Djibouti
205:PID:	BISSAU	:Guinea-Bissau
206:DAL:	DABOLA	:Guinea
207:EUR-T:	EUROPEAN 1950	:Tunisia
208:LEH:	LEIGON	:Ghana
209:MIN-A:	MINNA	:Cameroon
210:MPO:	M'PORALOKO	:Gabon
211:NSD:	NORTH SAHARA 1959	:Algeria
212:PTB:	POINT58	:Mean Solution (Burkina Faso and Niger)
213:PTN:	POINTE NOIRE 1948	:Congo
214:SRL:	SIERRA LEONE 1960	:Sierra Leone
215:VOR:	VOIROL 1960	:Algeria
216:AIN-B:	AIN EL ABD 1970	:Saudi Arabia
217:IND-B:	INDIAN	:Bangladesh
218:IND-I:	INDIAN	:India and Nepal
219:INF-A:	INDIAN 1954	:Thailand
220:ING-A:	INDIAN 1960	:Vietnam (near 16N)
221:ING-B:	INDIAN 1960	:Con Son Island (Vietnam)
222:INH-A:	INDIAN 1975	:Thailand
223:IDN:	INDONESIAN 1974	:Indonesia
224:EST:	CO-ORDINATE SYSTEM 1937 OF ESTONIA	:Estonia
225:EUR-L:	EUROPEAN 1950 (Cont'd)	:Malta
226:EUR-T:	EUROPEAN 1950 (Cont'd)	:Tunisia
227:SPK-A:	S-42 (PULKOVO 1942)	:Hungary
228:SPK-B:	S-42 (PULKOVO 1942)	:Poland
229:SPK-C:	S-42 (PULKOVO 1942) (Cont'd)	:Czechoslovakia
230:SPK-D:	S-42 (PULKOVO 1942) (Cont'd)	:Latvia
231:SPK-E:	S-42 (PULKOVO 1942) (Cont'd)	:Kazakhstan
232:SPK-F:	S-42 (PULKOVO 1942) (Cont'd)	:Albania
233:SPK-G:	S-42 (PULKOVO 1942) (Cont'd)	:Romania
234:CCD:	S-JTSK	:Czechoslovakia
235:NAS-V:	NORTH AMERICAN 1927 (Cont'd)	:East of 180W
236:NAS-W:	NORTH AMERICAN 1927 (Cont'd)	:West of 180W
237:NAR-E:	NORTH AMERICAN 1983	:Aleutian Island
238:NAR-H:	NORTH AMERICAN 1983	:Hawaii
239:SAN-J:	SOUTH AMERICAN 1969 (Cont'd)	:Baltra,Galapagos Island
240:AIA:	ANTIGUA ISLAND ASTRO 1943	:Antigua,Leeward Island
241:DID:	DECEPTION ISLAND	:Deception Island,Antarctica
242:FOT:	FORT THOMAS 1955	:Nevis, St.Kitts,Leeward Island
243:ISG:	ISTS 061 ASTRO 1968	:South Georgia Island
244:ASM:	MONTserrat ISLAND ASTRO 1958	:Montserrat, Leeward Island
245:REU:	REUNION	:Mascarene Island
246:AMA:	AMERICAN SAMOA 1962	:American Samoa Island
247:IDN:	INDONESIAN 1974	:Indonesia
248:KUS:	Kusaie ASTRO 1951	:Caroline Island, Fed.States of Micronesia
249:WAK:	Wake Island ASTRO 1952	:Wake Atoll
250:EUR-S:	EUROPEAN 1950	:Iraq, Israel, Jordan, Kuwait, Lebanon, Saudi Arabia and Syria
251:HER:	HERMANNSKOGEL	:Yugoslavia (Prior to 1990) Slovenia, Croatia, Bosnia and Herzegovina Serbia
252:IND-P:	INDIAN	:Pakistan
253:PUK:	PULKOVO 1942	:Russia
254:VOI:	VOIROL 1874	:Tunisia/Algeria

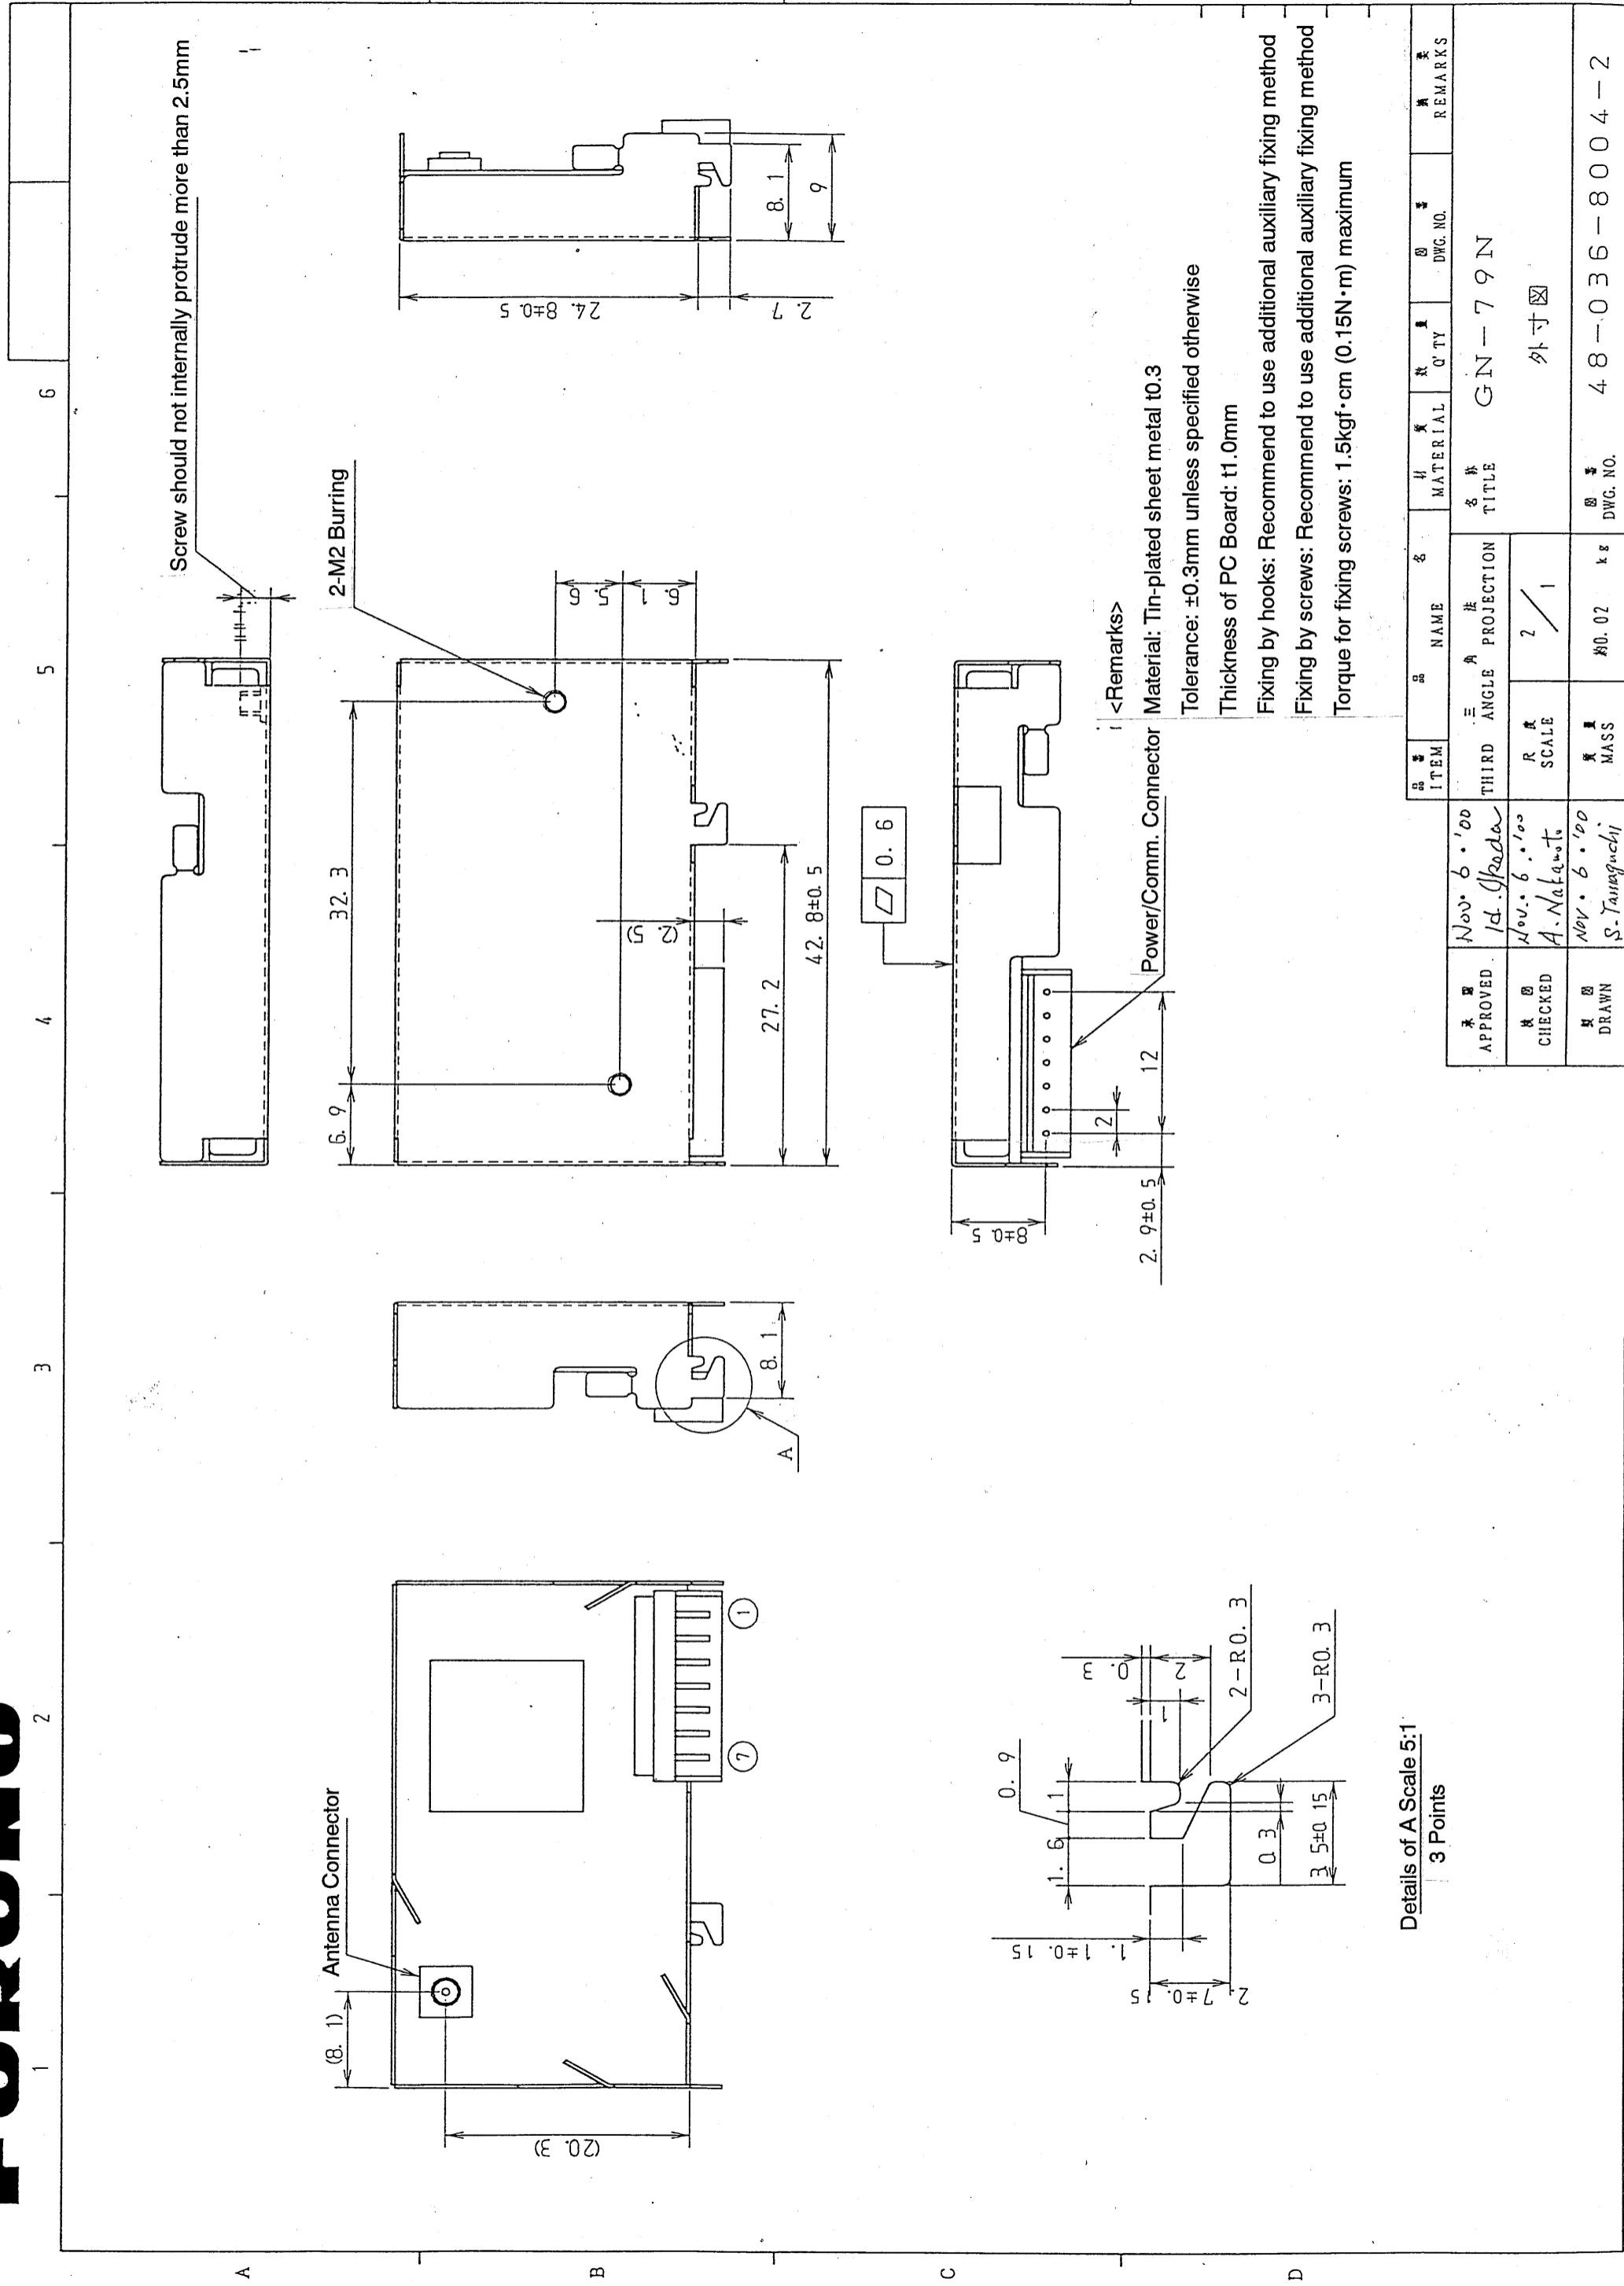

Details of A Scale 5:1  
3 Points